

Condair GS...OC C series

Gasfired steam humidifier - outdoor version



INSTALLATION, COMMISSIONING AND
SERVICE INSTRUCTIONS

Contents

1	Introduction	4
1.1	At the very beginning	4
1.2	Notes on the installation, commissioning and service instructions	4
2	For your safety	5
3	Product Overview	8
3.1	Product versions/Model designations	8
3.2	Delivery	8
3.3	Humidification system overview	9
3.4	Construction of the gasfired steam humidifier	10
3.5	Principle of operation	11
4	Basic planning	13
4.1	Selecting the unit	13
4.2	Selecting the control system	15
4.3	Options	17
4.4	Accessories	17
5	Mounting and installation works	19
5.1	Safety instructions for mounting and installation works	19
5.2	Unit fitting	19
5.3	Steam installation	23
5.4	Water installation	30
5.5	Gas installation	32
5.6	Flue gas installation	35
5.7	Installation of control and monitoring devices	37
5.8	Electrical Installation	38
6	Inspecting the installations (Check list)	41
7	Operation	43
7.1	Safety instructions for operation	43
7.2	Function of the display and operating elements	44
7.3	Commissioning and notes on operation	45
7.4	Taking out of operation	47
8	Maintenance	48
8.1	Maintenance instructions	48
8.2	Dismantling work for maintenance and the replacement of components	50
8.3	Notes on cleaning agents	61
8.4	Resetting the maintenance reminder	61
9	Troubleshooting	62
9.1	Important notes on troubleshooting	62
9.2	Error indication	62
9.3	Resetting the error indication	62
9.4	Replacing the backup battery on the control board of the Condair GS...OC	63
10	Taking out of service/Disposal	64
10.1	Taking out of service	64
10.2	Disposal/Recycling	64
11	Specifications	65
11.1	Technical Data	65
11.2	Flue gas specifications	66

1 Introduction

1.1 At the very beginning

Thank you for deciding on the **outdoor version of the Condair GS...OC C series gasfired steam humidifier** (abbreviated as “Condair GS...OC”).

The Condair GS...OC incorporates the latest technical advances and satisfies the requirements of the **European Gas Equipment Directive (90/396/EEC)** and all known safety standards. Nevertheless, improper use may result in danger to the user or third parties and/or impairment of the installation or other material assets.

To ensure a **safe, proper, and economical operation** of the Condair GS...OC, please **observe and comply with all information and safety instructions contained in the present installation, commissioning and service instructions**.

If you have questions, which are not or insufficiently answered in this documentation, please contact your Condair supplier. They will be glad to assist you.

1.2 Notes on the installation, commissioning and service instructions

The subject of these installation, commissioning and service instructions is the **gasfired steam humidifier Condair GS...OC C series** in its different versions. The various accessories (steam distribution pipes, water filter, etc.) are only described insofar as this is necessary for proper operation of the equipment. Further information on accessories can be obtained in the respective instructions.

These installation, commissioning and service instructions are restricted to:

- the **planning** of a humidifying system that is to be equipped with a gasfired steam humidifier Condair GS...OC.
- the **installation, commissioning, operation and servicing** of the gasfired steam humidifier Condair GS...OC.

These installation, commissioning and service instructions are supplemented by various separate items of documentation (system drawings, technical specifications, etc.). Where necessary, appropriate cross-references are made to these publications in the present installation, commissioning and service instructions.

Note: Under certain circumstances your installation may differ from the data in this documentation. In this case, please make contact with your local Condair representative.

Conventions



This symbol draws attention to **safety instructions and warnings** of potential danger which, if unheeded, could result in injury to persons and/or damage to property.

Safekeeping

Please safeguard these installation, commissioning and service instructions in a safe place, where it can be immediately accessed. If the equipment changes hands, the documentation should be passed on to the new operator. If the documentation gets mislaid, please contact your Condair supplier.

Language versions

These installation, commissioning and service instructions are available in various languages. Please contact your Condair supplier for information.

2 For your safety

Intended use



Gas fired steam humidifiers Condair GS...OC are intended exclusively for **humidification in ventilation systems within the specified operating conditions**. Any other type of application, without the written consent of your Condair supplier, is considered as not conforming with the intended purpose. The manufacturer/supplier cannot be made liable for any damages resulting from improper use. The user bears full responsibility. Operation of the equipment in the intended manner requires **that all the information in these instructions is observed (in particular the safety instructions)**.

General safety instructions



- **The local guidelines and regulations for the installation and operation of gasfired equipment (steam humidifiers) must be adhered to without reservation.**
- All persons working with the Condair GS...OC humidifier **must observe and comply with all information and safety instructions** contained in the present Installation, commissioning and service instructions.
If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.



- **Caution! What to do if you smell gas:**
Do not try to light any appliance. **Do not** touch any electrical switch; **do not** use any telephone in your building. Immediately call your gas supplier from a neighbor's telephone. Follow the gas supplier's instructions. If you can not reach your gas supplier, call the fire department.
- **Do not** store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Warning!** Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, an explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage.
Refer to this manual. For assistance or additional information consult a qualified installer, service agency, local gas supplier, or your distributor or branch.
- **Warning!** Should overheating occur, or the gas fail to shut off, shut off the manual gas valve to the appliance before shutting off the electrical supply.
- **Warning! Do not** use this appliance if any part has been **exposed to excess humidity**. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- The Condair GS...OC humidifier must only be installed, operated, and serviced by persons familiar with the product and sufficiently qualified for the respective task. It is the customer's responsibility to ensure that the present Installation, commissioning and service instructions is supplemented by internal instructions with respect to supervisory and notification liability, working methods, personnel qualifications, etc.
- An open unit must not be operated. Before putting the Condair GS...OC humidifier into operation make sure **all panels are closed and locked with the screw or the brackets respectively**.
- Do not carry out any operations for which you are not sufficiently qualified or unfamiliar with the consequences. In case of doubt, contact your supervisor or Condair supplier beforehand.

- **Before carrying out working steps** on particular components of the Condair GS...OC humidifier set the humidifier **out of service**, **disconnect it from the power supply** by setting the service switch to “Off”, **close the gas supply** and **secure the unit against unintentional operation**.

Warning! If the ambient temperature is below the freezing-point the water tank must be drained (see also chapter 7.4).

- **Warning!** Before carrying out maintenance or repair works, **especially under extreme weather conditions (e.g. rain, snow)**, protect the unit in a way that no electrical or other components inside the unit can get wet (cover unit with a tent).

If parts inside the unit have become wet, let them dry thoroughly and have the humidifier checked by a qualified service technician before restarting.

- Installation, maintenance, and repair of the electrical and the gas installation of the Condair GS...OC humidifier must be carried out only by qualified personnel being aware of possible danger and implications.

- Poorly maintained humidification systems may endanger health and affect proper operation. Therefore it is mandatory to **observe the specified maintenance intervals** and to **carry out maintenance work in strict accordance with the instructions**.

Note: The water supplied to the Condair GS...OC contains minerals which continuously accumulate inside the water tank during the evaporation process. To prevent excess accumulation, the water tank must be cleaned on a regular schedule.

- Observe all local safety regulations regarding the handling of mains-powered and gas fired devices.



- **Attention!** The electronic parts inside the humidifier are very sensitive to electrostatic discharge. To prevent damage, **appropriate measures against electrostatic discharge (ESD protection)** must be taken when working on an open unit.

- For safe operation of the Condair GS...OC humidifier, make sure the ambient conditions (temperature/humidity) meet the respective specifications defined in this documentation (see chapter 10.1):

- **Safe operating ambient temperatures** – As long as the unit is powered and is running, the heat generated internally (ie. that comes off of the tank) is sufficient to keep the space inside the enclosure warm and will protect the electronics (the electric heaters will not come on very often except during extremely cold temperatures). For this reason, the unit will operate safely at outdoor temperatures between **-25°C (-13°F) and +35°C (95°F)**.

Note: a thermostatically controlled cooling fan will be activated in the enclosure when the internal temperatures measured in the electronics area exceeds 25°C.

- **Safe ambient temperature range if there is no power** – If there is no power supplied to the unit, the unit can not run to generate any heat and the electric heaters and the cooling fan will also not work! Therefore the unit is safe to sit outdoor without any power at outdoor temperatures between **0°C (32°F) and 25°C (80°F)**. This temperature range is limited because of the electronics.

Warning! If the unit has been exposed to temperatures outside of the above stated range, do not restart the unit. Before restarting the humidifier have a qualified service technician inspect the appliance and replace any defective part.

Warning! If the outside temperature is below 5 °C when reconnecting the unit to the power supply let the heaters of the unit to be on for a minimum of 30 minutes to heat the electronics before starting the unit.

- If it is assumed that safe operation is no longer possible, switch the Condair GS...OC off, close the gas supply and secure the unit against inadvertent power-up. Safe operation may be affected in the following events:
 - you smell gas
 - components of the Condair GS...OC humidifier are damaged.
 - the Condair GS...OC humidifier does not work correctly.
 - components of the Condair GS...OC humidifier are worn or badly soiled.
 - after longtime storage under unfavorable conditions.
 - after transportation under unfavorable conditions.



- The Condair GS...OC must be installed only in locations equipped with a water drain or with sensors that safely interrupt water supply in case of leakage.
- To prevent excess humidification the operation of the Condair GS...OC must be monitored by a high limit on/off humidistat (see chapters 5.8/5.9).
- **Use only genuine accessories and spare parts** available from your Condair supplier.
- The Condair GS...OC humidifier and the optional accessories **must not be modified in any way** without the written consent of the manufacturer.

The worldwide well-organized Condair distributor network provides service at all times by qualified technicians. Please contact your Condair supplier in case of trouble or if you have any questions concerning the GS...OC humidifier and humidification technology in general.

3 Product Overview

3.1 Product versions/Model designations

The Condair GS...OC gasfired steam humidifier is available in **6 different models with different maximum steam output performance (40, 80, 120, 160, 200 and 240 kg/h)**.

All models can be operated with natural gas or propane (ex-works the unit is supplied for a specific type of gas operation, as stated on the rating plate).

Model designation

	GS	40	OC	**	C	G20
Product line (gasfired steam humidifier with operation and display unit)						
Steam output (kg/h) 40 80 120 160 200 240						
Housing for outdoor installation (Outdoor Cabinet)						
Equipment series						
Fuel Natural gas H, E, E(S): Natural gas L, ELL: Natural gas HS: Natural gas Lw: Natural gas Ls: Propane gas P:						G20 G25 G25.1 G27 GZ350 G31

** model designation on rating plate

The Condair GS...OC gasfired steam humidifiers are built into an outdoor cabinet for outdoor installation.


The humidifiers are equipped with an **operating and display unit**, as standard, by means of which the current operating parameters can be interrogated and the equipment can be configured for operation. The humidifiers are controlled via the **internal PID controller** or an external **continuous controller**.

3.2 Delivery

The standard delivery includes:


- Gasfired steam humidifier Condair GS...OC (according to the model designation) complete with all flue gas components included
- Installation, commissioning and service instructions Condair GS...OC C series
- Operating instructions Condair GS...OC C series control
- Spare parts list (pink)
- Accessories ordered according to chapter 4.4 (steam distribution pipes, steam hoses, etc.).

3.3 Humidification system overview

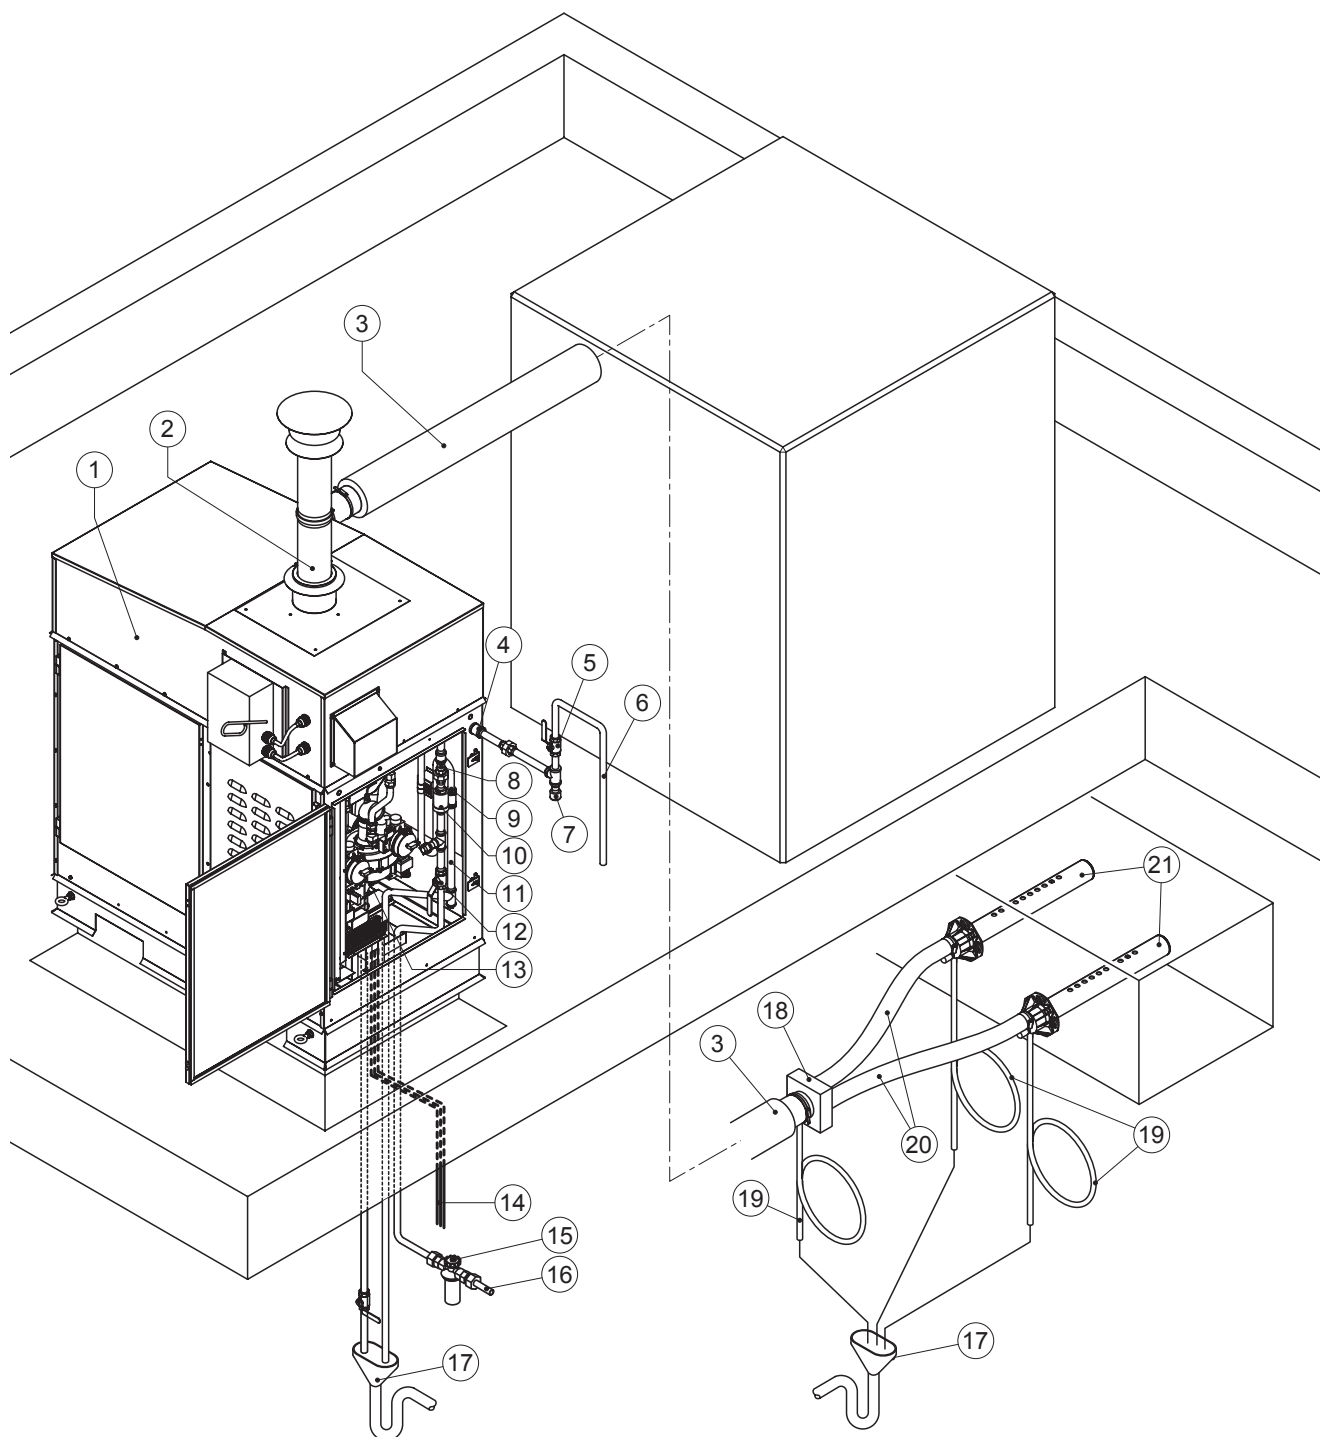

- | | |
|---|---|
| 1 Gasfired steam humidifier | 11 Drain water line (building side) |
| 2 Flue gas pipe with rain cap and storm collar (included in the delivery) | 12 Shut-off valve water supply (building side) |
| 3 Steam supply pipe (building side) | 13 Auxiliary drain connection |
| 4 Gas supply connection | 14 Electrical connections (building side) |
| 5 Shut-off valve gas supply line (building side) | 15 Filter valve (accessory "Z261") |
| 6 Gas supply line (building side) | 16 Water supply line (building side) |
| 7 Sediment trap (building side) | 17 Funnel with trap (building side) |
| 8 Fill water connection | 18 Steam hose adapter (accessory "SA...") |
| 9 Check valve | 19 Condensate hose (accessory "KS10") |
| 10 Drain water connection | 20 Steam hose (accessory "DS80") |
| | 21 Steam distribution pipe (accessory "81-...") |

3.4 Construction of the gasfired steam humidifier

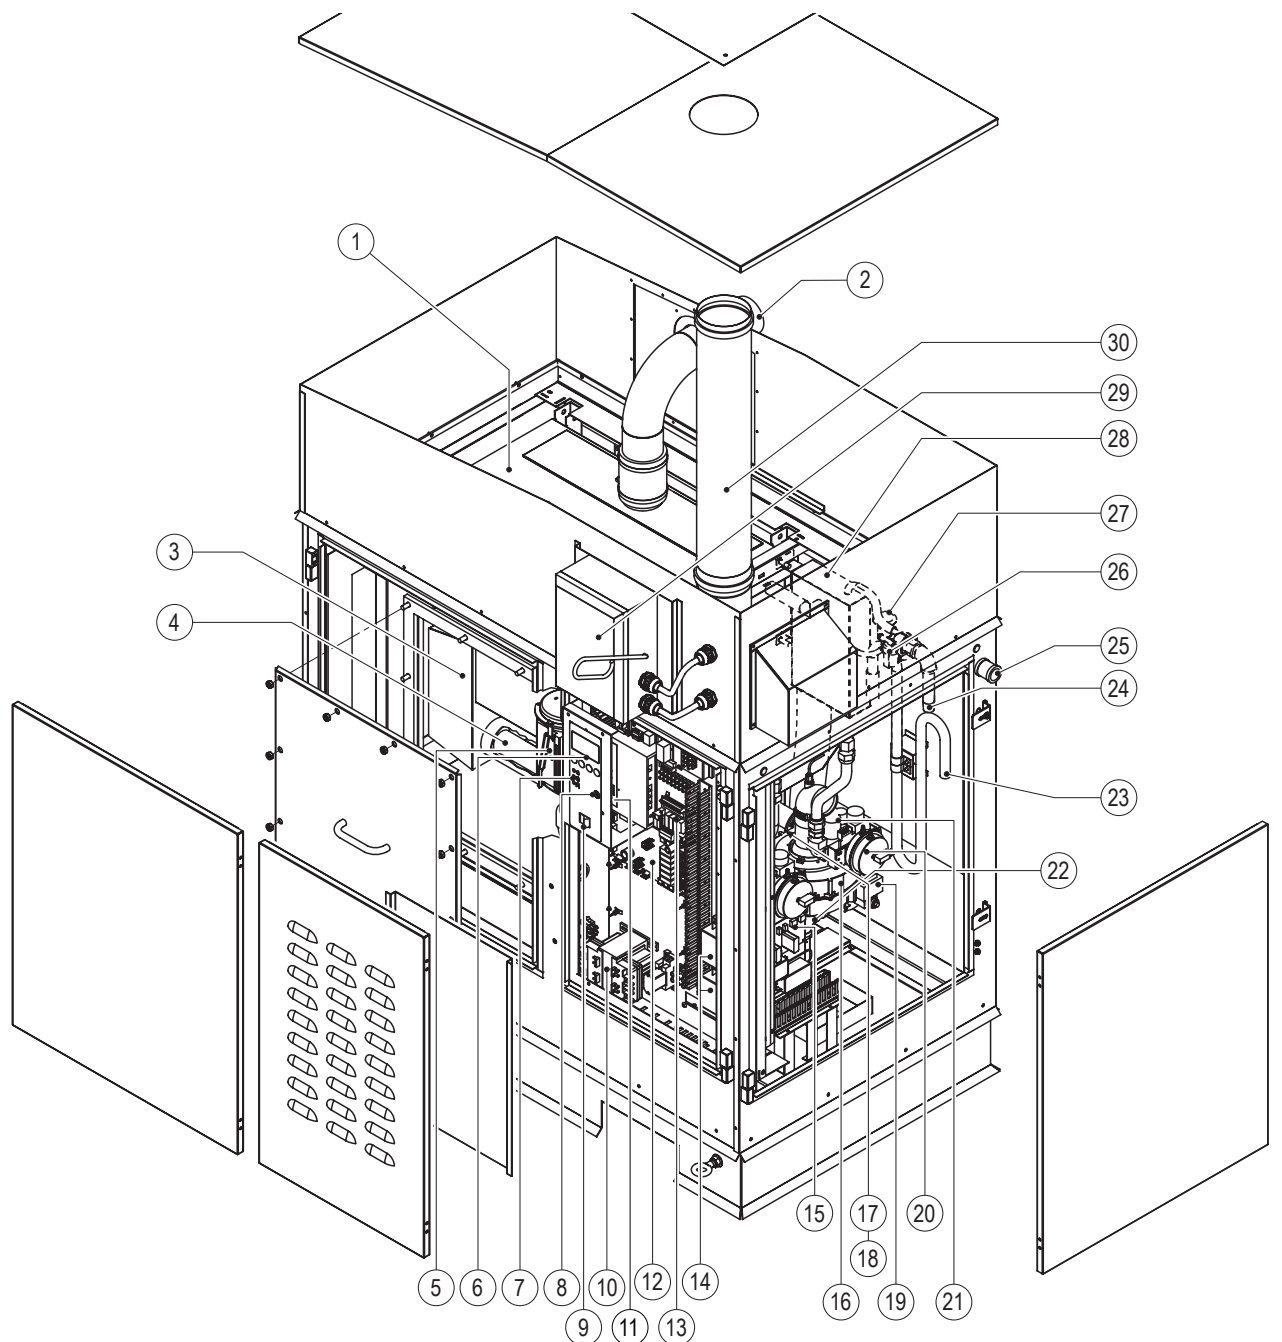

- | | |
|--|---|
| 1 Water tank | 15 Burner electronic |
| 2 Steam outlet connection | 16 Combustion air blower (1 to 6) |
| 3 Heat exchanger (1 to 3) | 17 Flame sensor |
| 4 Burner (1 to 6) | 18 Igniter |
| 5 Level unit | 19 Drain pump |
| 6 Key pad and display unit | 20 Air pressure switch |
| 7 Indication LED's
green: "Steam production"
yellow: "Maintenance"
red: "Error" | 21 Gas pressure control valve (1 to 6) |
| 8 Drain key (manual draining) | 22 Auxiliary drain connection |
| 9 Unit switch | 23 Drain connection |
| 10 Transformer | 24 Double inlet valve filling water |
| 11 Control board | 25 Connection filling water |
| 12 Driver board | 26 Connection gas supply line |
| 13 Remote operating and fault indication board | 27 Vacuum break |
| 14 Ignition modules | 28 Filling chamber |
| | 29 Compartment for external service switch |
| | 30 Flue gas pipe with rain cap and storm collar |

3.5 Principle of operation

Combustion System

The combustion system is based on a fully modulating forced draft combustion air blower, a negative pressure regulator gas valve and a 100% premix burner. On a call for humidity, the combustion air blower starts and creates a negative pressure across an orifice located at the air inlet. The blower starts for a moment to purge the system, then the hot surface ignitor is activated. During this time the electronic ignition module does a diagnostic check of safety systems including the air proving switch which senses the negative pressure at the air inlet.


After the function of the safety systems has been verified, the gas valve will open and the gas/air mixture is ignited by the hot surface ignitor. If flame is sensed by the flame sensor within 7 seconds the gas valve remains open and combustion continues. If flame is not sensed, the above sequence is repeated a maximum of three times after which the ignition module will lock out and a respective error message will appear in the display.

The gas valve maintains a constant ratio of air to Natural Gas or Propane independent of blower speed or external conditions. This air and fuel is thoroughly mixed in the blower and then forced through the burner ports where ignition occurs.

Hot products of combustion are forced through a baffle inside the heat exchanger and then vented outside. The heat exchanger has large vertical surfaces to minimize scale build-up and promote scale shedding to the bottom of the tank. This self-cleaning action helps to maintain the efficiency of the heat exchanger while the smooth surfaces allow for easy cleaning when necessary.

The GS 40 OC has a single combustion chamber/heat exchanger. The combustion system is duplicated on larger units with multiple chambers inside a common tank.

Regulation of the water level in the tank

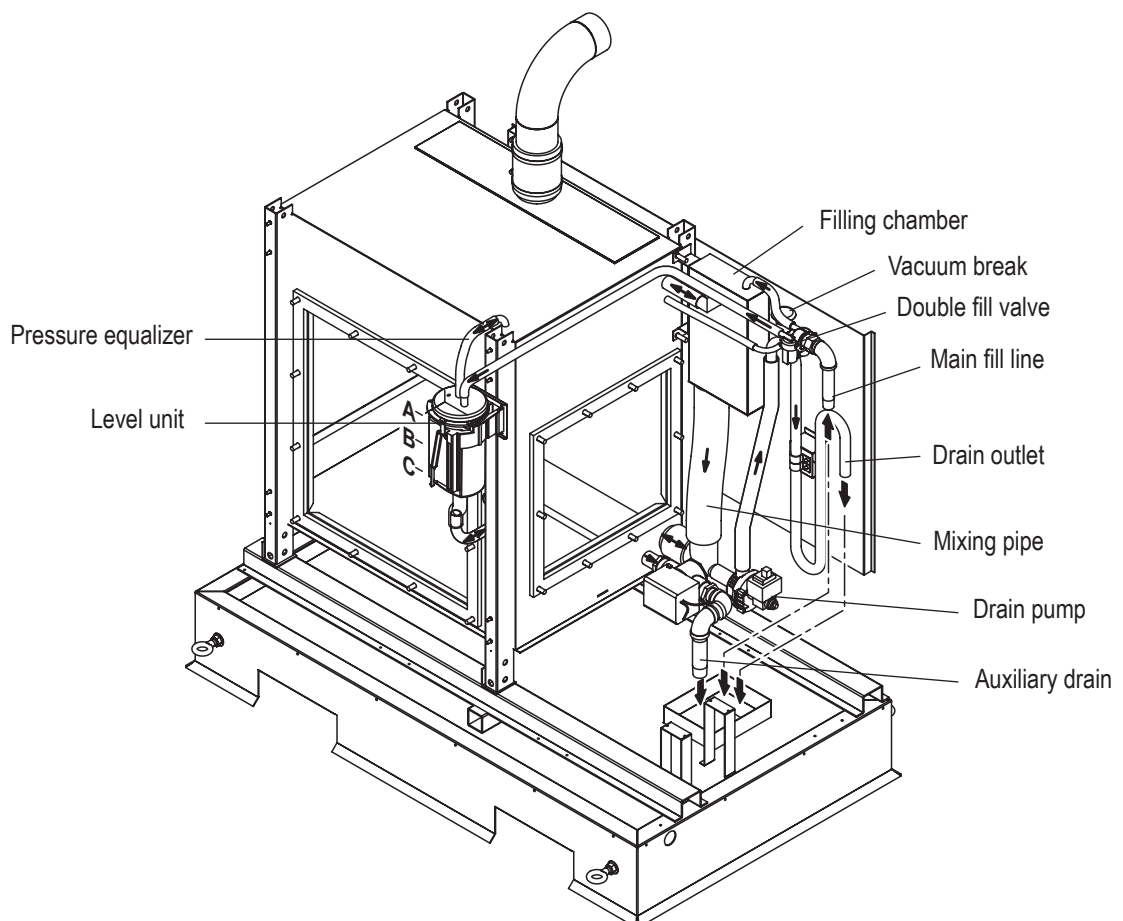

The level in the water tank is continuously monitored by the level unit. On initial start-up, the control unit checks the function of the level unit. During this test the tank is filled up first to level "A", then drained to level "C" and filled up again to level "A". As soon as level "B" is reached and the test of the level unit was successful the humidifier is ready for operation, if a humidification demand is present the combustion process starts.

When the water level due to the evaporation process reaches level "B", the level unit sends a signal to the control system, which opens the double inlet valve and the water tank is filled up. On reaching level "A", the level unit again sends a signal to the control system and the double inlet valve is closed.

If the water level goes below level "C", the combustion will be interrupted until the water level reaches "C" again.

To ensure safe operation, the control system constantly monitors the proper function of the level unit in regular intervals.

Steam generation/control

The steam is generated in the water tank via the heat exchanger/s. The steam production is regulated continuously by the internal PID controller or an external continuous controller.

Flushing

The concentration of minerals in the water in the tank increases due to the evaporation process. In order that this concentration does not exceed a specified value, an appropriate quantity of water is pumped off from the tank at a fixed time interval and replaced by fresh water. These flushing cycles are based on steam production to increase the efficiency of the humidifier.

When a flushing cycle is initiated the drain pump is activated and the inlet valve opens. In the mixing pipe below the filling chamber the hot drain water is mixed with the cold cooling water and leaves the unit with a temperature approx. around 60 - 70 °C.

If the lowest operating level is reached in the tank during the flushing process, the inlet valve remains open until the water level in the tank has again reached the normal operating level.

4 Basic planning

All the data necessary for the selection and layout of a Condair GS...OC humidifier system are provided in the following chapters.

4.1 Selecting the unit

The selection of the unit is reflected in the type description:



4.1.1 Calculating the maximum required steam capacity

The maximum required steam capacity is calculated from the following formulas:

$$m_D = \frac{V \cdot \rho}{1000} \cdot (x_2 - x_1) \quad \text{or} \quad m_D = \frac{V}{1000 \cdot \epsilon} \cdot (x_2 - x_1)$$

m_D : maximum steam demand in **kg/h**

V : volume of supply air portion per hour in **m³/h** (for indirect room humidification) or room volume to be humidified per hour in **m³/h** (for direct room humidification)

ρ : specific gravity of air in **kg/m³**

ϵ : specific volume of air in **m³/kg**

x_2 : desired absolute room air humidity in **g/kg**

x_1 : minimum absolute supply air humidity in **g/kg**

The values for ρ , ϵ , x_2 and x_1 can be gathered from the **h,x-diagram** or the **Carrier-Diagram** for moist air respectively.

For a rough estimate of the calculated steam capacity, the following table can be used. The values listed in the table are based on a desired room air temperature of 20°C and a desired relative room air humidity of 45 %rh.

Note: To roughly estimate the calculated maximum steam capacity for larger supply air portions or room volumes, the values listed in the table can be projected accordingly.

Max. portion of supply air in m ³ /hr or room volume to be humidified per hour in m ³ /hr			max. steam capacity in kg/h
Temperature / rel. humidity of supply air			
-15 °C / 90%rh	-5 °C / 80%rh	5 °C / 60%rh	
5000	6600	8000	40
10000			16000
15000	19800	24000	120
20000	26400	32000	160
25000	33000	40000	200
30000	39600	48000	240

Condair GS 80 OC C G20

Example:

Max. portion of supply air 10000 m³/h, temperature/rel. humidity of supply air -15°C/90%rh

Important notes:

- The required maximum steam capacity depends on the specific application and the installation. The calculated steam capacity based on the above formulas, the h,x diagram and the condition of the air to be humidified does not consider any steam loss (e.g. due to condensation in the steam hoses and the steam distributors), any heat loss of the unit as well as any absorption or release of humidity of materials located in the room being humidified. In addition, the calculated steam capacity does not consider any losses caused by the draining rate depending on the water quality.
- The total amount of losses depends on the entire system and must be taken into consideration when calculating the required steam capacity. If you have any questions regarding the calculation of the steam capacity please contact your Condair supplier.
- For systems where the max. required steam capacity varies extensively (e.g. for test facilities or for systems with variable air volume flow, etc.), please contact your Condair supplier.

4.1.2 Combustion gas

The Condair GS...OC can be operated with **natural gas** or **propane**. The equipment is configured ex-works for the respective combustion gas that is to be employed. If required, the equipment can be converted at a later date to work with one of the other combustion gas.

Combustion gas	Designation
Natural gas H, E, E(S)	G20
Natural gas L, ELL	G25
Natural gas HS	G25.1
Natural gas Lw	G27
Natural gas Ls	GZ350
Propane gas P (Liquid gas)	G31


Condair GS 80 OC C G20

4.2 Selecting the control system

The various control systems

– System 1: Room humidity control

System 1 is suited for **air conditioning systems with mainly recirculated air**. The humidity sensor is preferably located in the room itself or in the exhaust air duct.

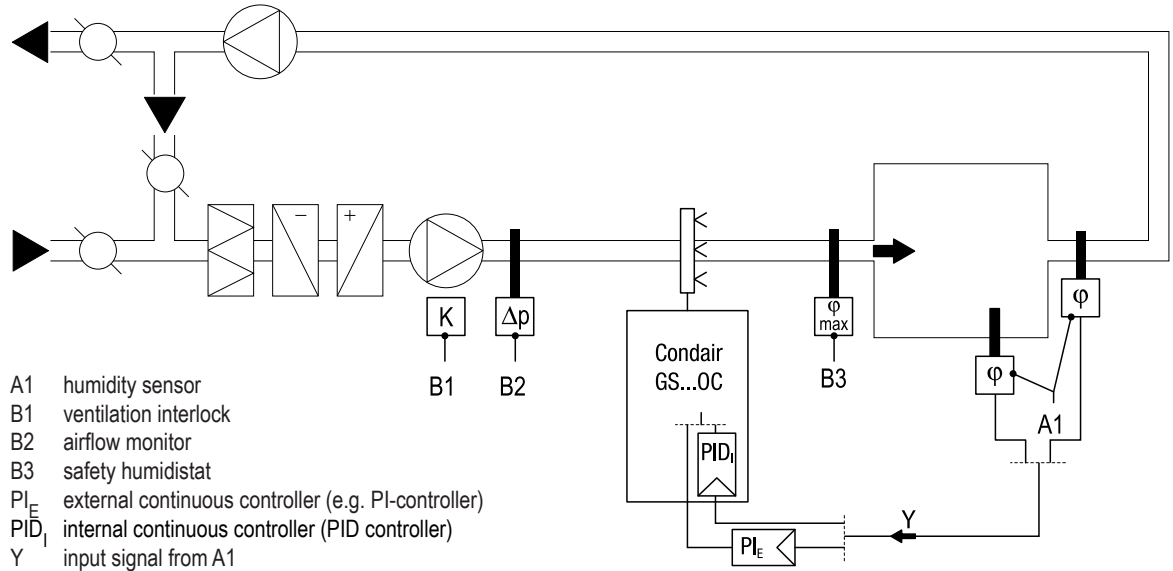


– System 2: Room humidity control with continuous limitation of the supply air humidity

System 2 is suited for air conditioning systems with a **large portion of supply air, low supply air temperature, post-humidification, or variable airflow volume**. If the supply air humidity exceeds the preset value, the continuous limitation is effected prior to the room humidity control.

The humidity sensor (A1) is preferably located in the exhaust air duct or in the room itself. The humidity sensor (A2) for the limitation of the supply air humidity is located in the supply air duct after the steam distribution pipe. This control system requires the internal PID controller or an external continuous controller with the option to connect a second humidity sensor.

Attention! The continuous limitation of the supply air humidity is no substitute for the safety-humidistat.

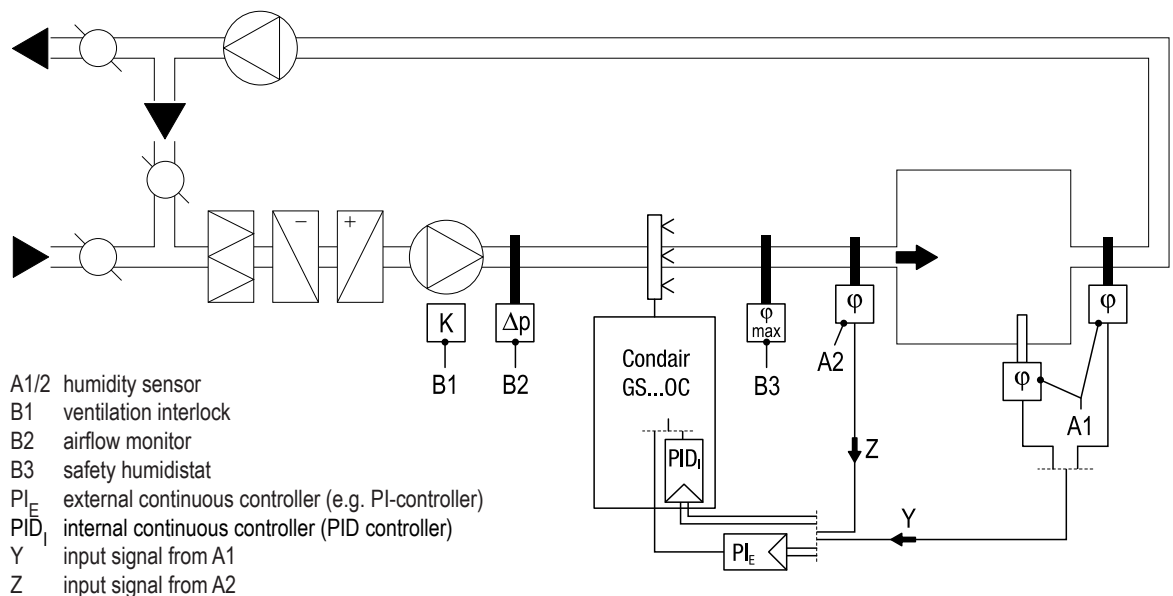

Control/input signals

The Condair GS...OC is regulated via the internal PID controller or an external continuous controller (e.g. PI controller).

Important! For the control systems 2 and 3 the external controller must be equipped with two control signal inputs.

The Condair GS...OC processes the following control signals:

- 0 ... 10 VDC
- 2 ... 10 VDC
- 0 ... 10 mADC
- 2 ... 10 mADC
- 0 ... 20 mADC
- 4 ... 20 mADC
- 0 ... 5 VDC
- 1 ... 5 VDC

Further information is provided in Chapter 5.9.

Output signals

The Condair GS...OC provides the following output signals:

- 10 VDC (max. 20 mA)
- Remote operating and fault signals (4 potential-free contacts)

Further information is provided in Chapter 5.9.

4.3 Options

At the moment no options are needed for the Condair GS...OC.

4.4 Accessories

4.4.1 Accessories overview


Model Condair GS...OC	40 ...	80 ...	120 ...	160 ...	200 ...	240 ...
Steam distribution pipe (see accessory details in chapter 4.4.2)	81-...					
number	1	2	3	4	5	6
OptiSorp steam distribution system (see accessory details in chapter 4.4.2)	System 1	System 2	System 3	System 4	System 2 System 3	System 3
number	1	1	1	1	1 of each	2
Steam hose adapter	—	SA80 (3" / 2x 1 3/4")	SA120 (3" / 3x 1 3/4")	SA160 (4" / 4x 1 3/4")	SA200 (4" / 6x 1 3/4")	SA240 (4" / 6x 1 3/4")
number	—	1	1	1	1	1
Steam hose / meter	DS80					
number	1	2	3	4	5	6
Condensate hose / meter	KS10					
number	1	2	3	4	5	6
Filter valve	Z261 (1 pc. per system)					

4.4.2 Accessory details

Steam distribution pipes

The steam distribution pipes are selected on the basis of the **duct width** (for horizontal installation) or the **duct height** (for vertical installation) and the capacity of the steam humidifier.

Important! Always select the longest possible steam distribution pipe (optimum humidification distance).

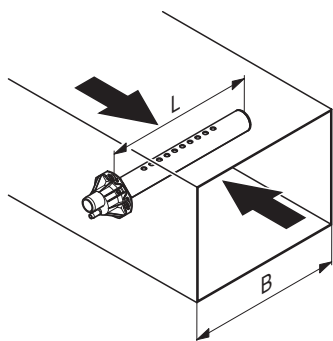

Steam distribution pipes ¹⁾ for GS...OC 40, 80, 120, 160, 200 and 240		Duct width (B)	Steam capacity
Type	Length in mm (L) ²⁾	in mm	max. in kg/h ³⁾
81-350	350	400...600	30
81-500	500	600...750	30
81-650	650	750...900	50
81-800	800	900...1100	50
81-1000	1000	1100...1300	50
81-1200	1200	1300...1600	50
81-1500	1500	1600...2000	50
81-1800	1800	2000...2400	50
81-2000	2000	2200...2600	50
81-2300	2300	2500...2900	50
81-2500	2500	2700...3100	50

1) Material: CrNi steel


2) Special length on request

3) To fully exploit the overall capacity of your GS...OC humidifier, the output of each steam outlet may be fed to more than one distribution pipe. If more than one steam distribution pipe is fed per steam outlet the steam line must be divided into multiple branches. Appropriate fittings are available on request.

Note: If the humidification distance (see chapter 5.3.1) has to be reduced for technical reasons, the steam output of your unit must be divided between **two steam distribution pipes** or the **OptiSorp steam distribution system** must be used. If this is the case, contact your Condair supplier.

OptiSorp steam distribution system

The OptiSorp steam distribution system is used in ventilation ducts with a short humidification distance (for the calculation of the humidification distance refer to chapter 5.3.1). When ordering an OptiSorp system the duct dimension must be specified. Please consult the data in the following table.

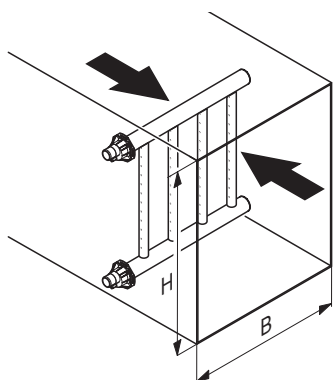

OptiSorp	Number of steam connections	Max. steam capacity in kg/h ¹⁾	Duct dimensions	
			Width in mm	Height in mm
System 1	1	45 (30)	450...4000	450...1650
System 2	2	90 (60)	450...4000	450...2200
System 3	3	135 (90)	450...4000	800...3200
System 4	4	180 (120)	450...4000	800...3200

1) For duct widths <600 mm the values in brackets apply

5 Mounting and installation works

5.1 Safety instructions for mounting and installation works

The local directives and regulations for the installation of gasfired equipment (Steam humidifiers) must be unconditionally observed and complied with.



All **local regulations** relating to the execution of gas, flue gas, water, steam and electrical installations must be observed and complied with.

All mounting and installation work must be performed **only by adequately qualified personnel**. Ascertaining the qualifications is the customer's responsibility.

All the information contained in these installation, commissioning and service instructions relating to equipment assembly and to gas, flue gas, water, steam and electrical installation **must be unconditionally observed and complied with.**



Caution - Danger from electric shock! The connection of the steam humidifier to the mains electrical supply must not be made until all installation work has been completed.

Caution! Incorrectly executed installations can result in personal injury and/or damage to property through explosions, fires, carbon monoxide poisoning, electric shock, etc. If you require assistance, please contact a qualified installer, your local gas supplier or your Condair representative. In the installation itself, use only materials available from your Condair representative and accessories approved by him.

5.2 Unit fitting

5.2.1 Humidifier location


To ensure proper functioning of the steam humidifier Condair GS...OC and to obtain optimum efficiency, the following points must be considered and observed when choosing the location for the steam humidifier:

- The Condair GS...OC must be mounted only **outside of buildings** where the flue gases can escape freely.
- the **local and national regulations** for installation of gasfired equipment must be observed and followed. The manufacturer accepts no liability for non-compliance with these regulations.
- Install the steam humidifier so that the **length of the steam hose** is as short as possible (**ideally 2 m, max. 4 m**), the **minimum bend radius ($R = 300 \text{ mm}$)** and the **minimum upslope (20 %)** and the **minimum downslope (5 %)** of the steam hose can be maintained (see Chapter 5.3.2).
Note: Long steam lines reduce the maximum steam output of the humidifier, due to the heat loss involved. The static pressure also increases.
- Install the steam humidifier so that the flue gas outlet meets the following minimum distances:
 - at least 0.6 m above any ridge located within 3 m
 - at least 1 m above any forced air inlet located within 3 m
 - at least 1 m below and 1 m horizontally away from, or 0.5 m above any door, window, or gravity air inlet of any adjacent building.
 - at least 1 m horizontally away from electric meters, gas meters, regulator and relief equipment.
 - at least 2.5 m above grade when it is adjacent to public walkways.
- Make sure in the place of location of the Condair GS...OC the supply of clean fresh air is provided. The unit must be placed at least 3 m away from any mechanical exhaust outlet.




Caution! Operation of the humidifier with unclean air can lead to safety problems and reduce the output of the unit. Impurities in the air are, for example: Halogens, ammonia, chloride, excessive dust, lime and dirt. For questions about air quality, please refer to the technical service department of your Condair distributor.



- The Condair GS...OC gasfired steam humidifiers are **designed for mounting on a curb**.
Caution! The curb and the place of installation must be built to structurally support the entire weight of the humidifier when in operation.
- The sheet covering of the Condair GS...OC heats up during operation (max. surface temperature approx. 60 - 70 °C). Therefore make sure that no heat-sensitive materials are placed in the immediate vicinity of the humidifier.
- **No combustible materials** must be placed in the **immediate vicinity** of the Condair GS...OC humidifier (Insulation materials, wooden floor coverings, etc.). **Observe local regulations!**
- **Do not mount** the humidifier on a base that is subject to vibration. If necessary, please contact your Condair representative.
- Do not cover the air openings (louvers) in the panels of the unit, otherwise the air flow may be insufficient.
- Do not place the unit in a narrow niche or a closed compartment. Place the humidifier so that the **unit is easily accessible** and there is sufficient space for maintenance work. The **minimum distances** shown in the following illustration **must be maintained**.

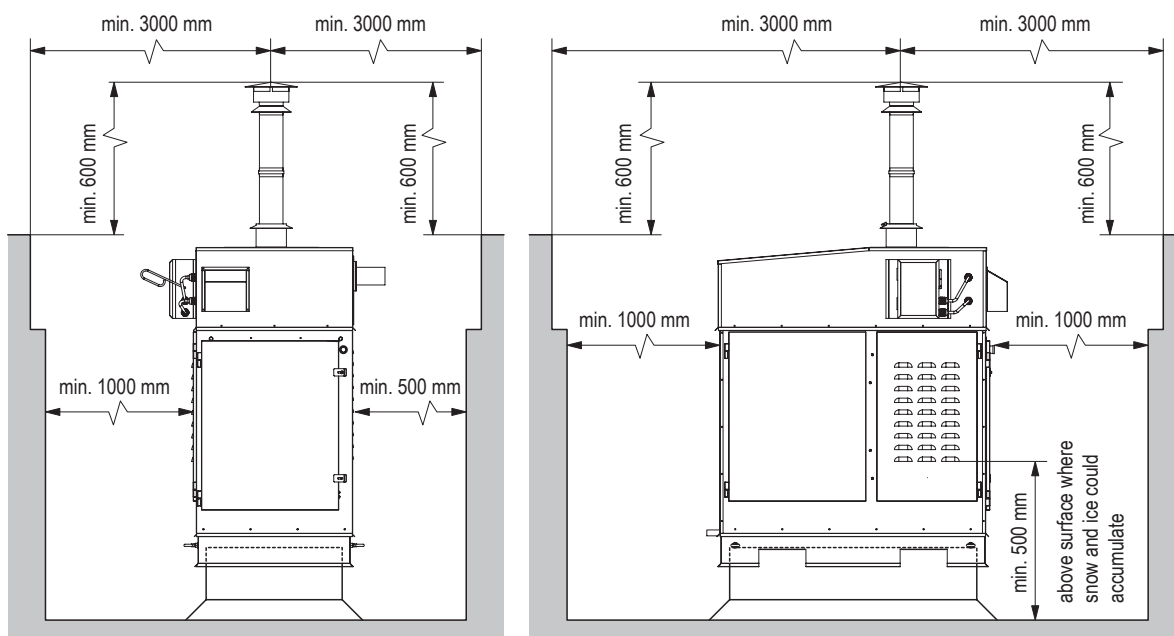

Dimensions (in mm)

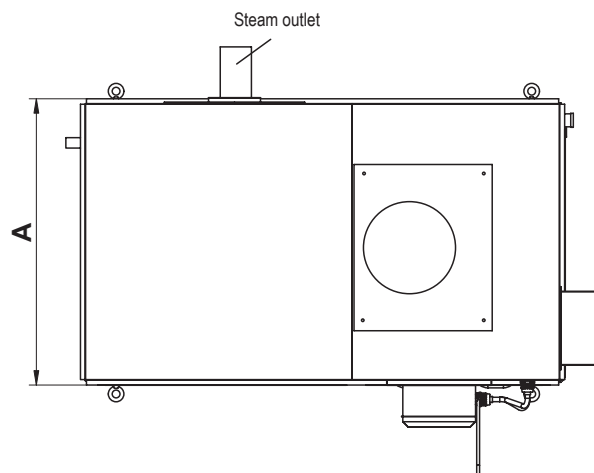

	A	B
GS 40	545	589
GS 80	708	617
GS 120	1104	632
GS 160	1104	632
GS 200	1500	647
GS 240	1500	647

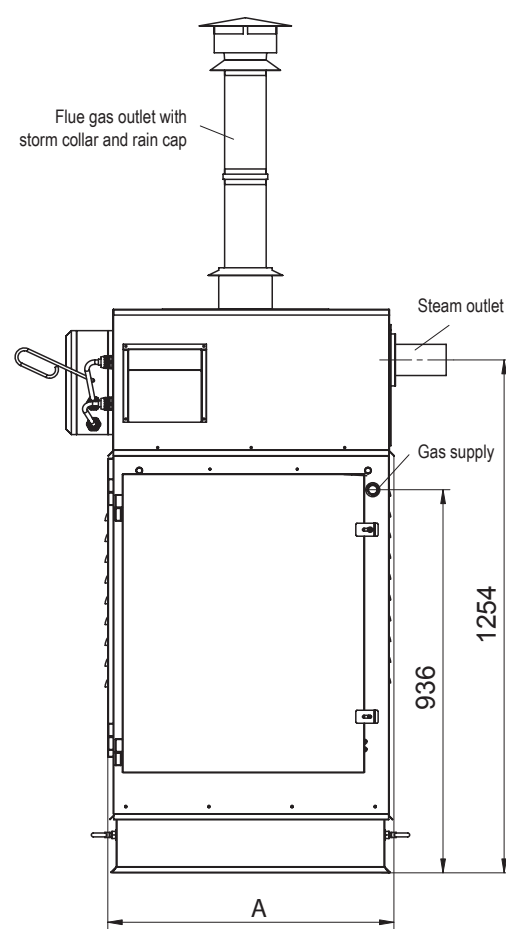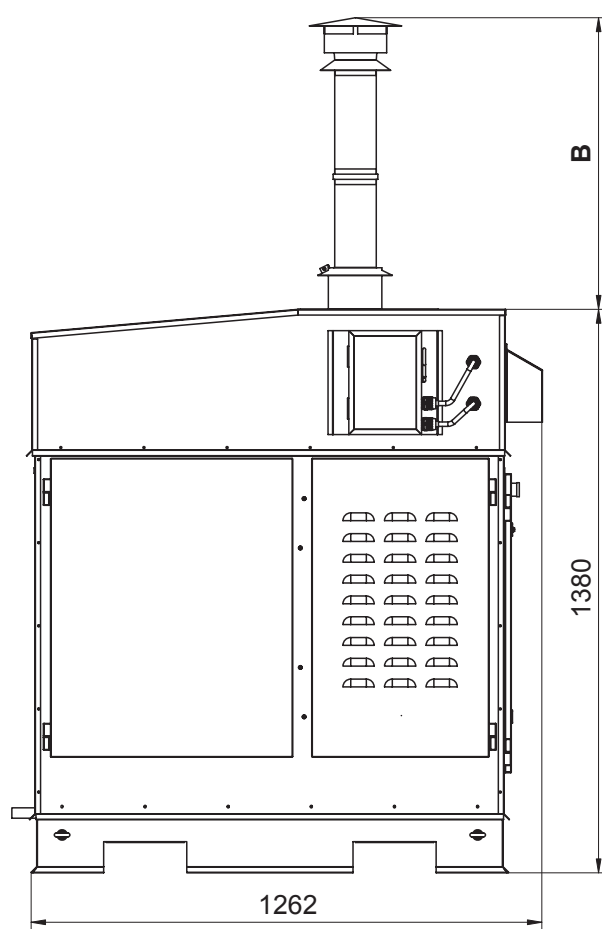

Connections and weights

Model	Connections						Net weight kg	Operating weight kg
	Flue gas	Steam	Filling water	Gas	Water drain	Aux. Water drain		
GS...OC 40	3" (76 mm)	1 3/4" (45 mm)	BSP 1/2"	BSP 1/2"	BSP 3/4"	BSP 1/2"	209	280
GS...OC 80	4" (101 mm)	3" (76 mm)	BSP 1/2"	BSP 3/4"	BSP 3/4"	BSP 1/2"	251	362
GS...OC 120	5" (127 mm)	3" (76 mm)	BSP 1/2"	BSP 1"	BSP 3/4"	BSP 1/2"	342	563
GS...OC 160	5" (127 mm)	4" (101 mm)	BSP 1/2"	BSP 1"	BSP 3/4"	BSP 1/2"	353	563
GS...OC 200	6" (152 mm)	4" (101 mm)	BSP 1/2"	BSP 1 1/4"	BSP 3/4"	BSP 1/2"	458	778
GS...OC 240	6" (152 mm)	4" (101 mm)	BSP 1/2"	BSP 1 1/4"	BSP 3/4"	BSP 1/2"	470	779

5.2.2 Mounting the humidifier

Transporting the unit

The Condair GS...OC can be transported and lifted either with a forklift via the two cutouts in the base of the unit or with a crane via the four removable lifting lugs. Please observe the following safety notes:



Caution! When lifting the unit with a forklift make sure the forks extend across the entire base of the unit to prevent tipping or damage to the unit.



Caution! When lifting the unit with a crane all four lifting lugs must be used. When lifting the unit make sure the unit is not damaged by the lifting cables/chains.

Mounting instructions



- At the place of installation make a curb (foundation) according to the following drawing. Make sure the top of the curb is level in either direction.



Caution! Make sure the curb and the place of installation are solid enough to structurally support the entire weight of the humidifier when in operation.

	A	B	C	D	E	F
GS 40 OC	866	220	19	127	27	101
GS 80 OC	866	382	20	127	28	101
GS 120 OC	866	779	20	127	18	101
GS 160 OC	866	779	20	127	18	101
GS 200 OC	866	1175	32	127	18	101
GS 240 OC	866	1175	32	127	18	101

Dimensions in mm

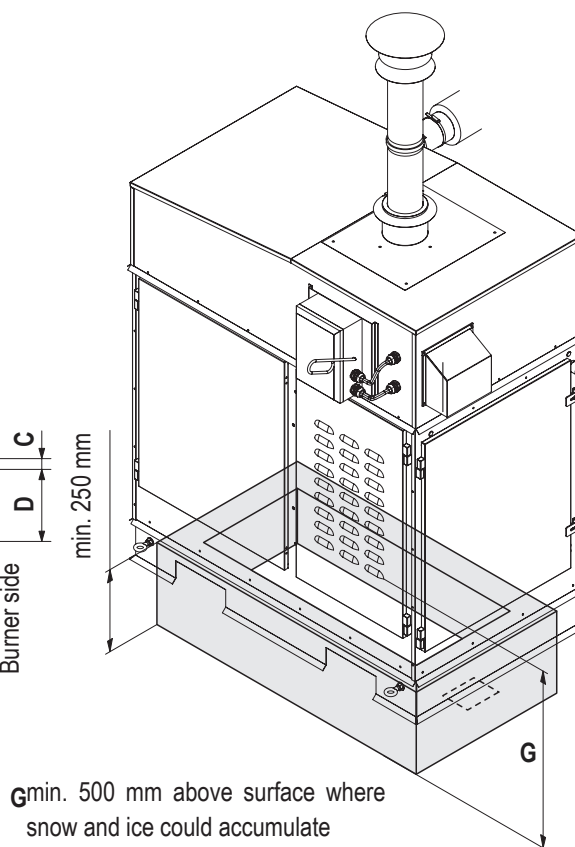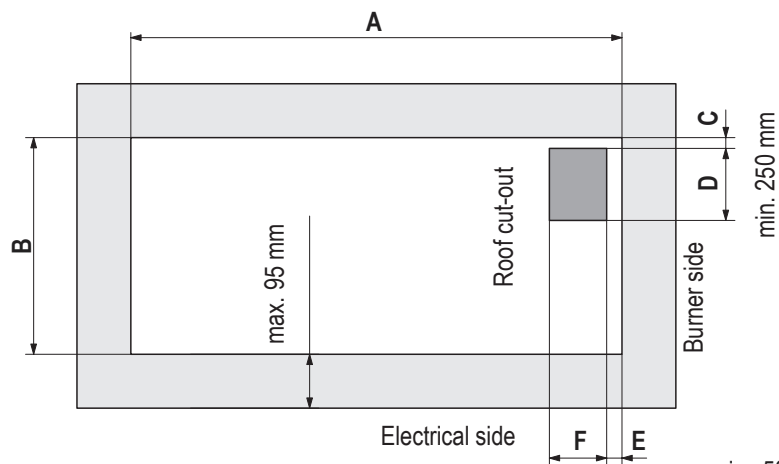

- Cut out the hole in the roof for routing the water piping and the electrical wiring into the unit (dimensions see above).
- Lift the unit on the curb using a crane.



Caution! Please observe the safety instructions for transporting the unit (see above).



Caution! To make sure positive or negative pressure of the building does not affect the operation of the Condair GS..OC the pipe chase in the unit base must be sealed after completion of the installation of the water piping and the electrical wiring.


5.3 Steam installation

5.3.1 Positioning and mounting of the steam distribution pipes

The location for the steam distribution pipes should be determined at the time of dimensioning the air conditioning system. Please note the following instructions to ensure proper humidification of the duct air.

Calculating the humidification distance

The water vapor, emitting from the steam distribution pipes, requires a certain distance to be absorbed by the ambient air so that it is no longer visible as steam. This distance is referred to as **humidification distance “ B_N ”** and serves as a basis for the determination of the minimum distances from the upstream components in the system.

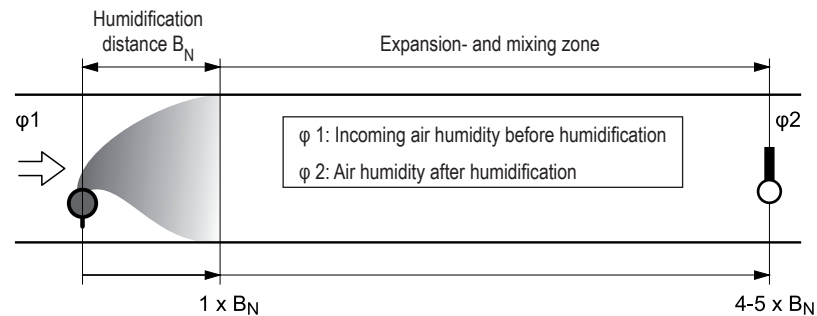

The calculation of the humidification distance “ B_N ” is dependent on several factors. For a rough estimation of the humidification distance “ B_N ”, the following table is useful. Recommended **standard values** listed in this table are based on a supply-air temperature range of 15 °C to 30°C. The values given in **bold print only apply to steam distribution pipes 81-...**, the values in brackets apply to the **OptiSorp steam distribution system**.

Input humidity $\phi 1$ in %rh	Length of humidification distance B_N in m Output humidity $\phi 2$ in %rh					
	40	50	60	70	80	90
5	0.9 (0.22)	1.1 (0.28)	1.4 (0.36)	1.8 (0.48)	2.3 (0.66)	3.5 (1.08)
10	0.8 (0.20)	1.0 (0.26)	1.3 (0.34)	1.7 (0.45)	2.2 (0.64)	3.4 (1.04)
20	0.7 (0.16)	0.9 (0.22)	1.2 (0.30)	1.5 (0.41)	2.1 (0.58)	3.2 (0.96)
30	0.5 (0.10)	0.8 (0.17)	1.0 (0.25)	1.4 (0.36)	1.9 (0.52)	2.9 (0.88)
40	–	0.5 (0.11)	0.8 (0.20)	1.2 (0.30)	1.7 (0.45)	2.7 (0.79)
50	–	–	0.5 (0.13)	1.0 (0.24)	1.5 (0.38)	2.4 (0.69)
60	–	–	–	0.7 (0.16)	1.2 (0.30)	2.1 (0.58)
70	–	–	–	–	0.8 (0.20)	1.7 (0.45)

For duct widths <600 mm the humidification distance for the OptiSorp system increases by approx. 50%

$\phi 1$ in %rh: Relative supply air humidity prior to humidification at the lowest supply air temperature

$\phi 2$ in %rh: Relative supply air humidity after the steam distribution pipe at maximum capacity

Example

given:

$\phi 1 = 30$ %rh, $\phi 2 = 70$ %rh


humidification distance B_N :

1.4 m (0.36 m for steam distribution system OptiSorp)

Note: If the humidification distance has to be reduced for technical reasons, the amount of steam per steam outlet must be divided between **two steam distribution pipes** or the **steam distribution system OptiSorp** must be used. If this is the case, contact your Condair supplier.

Minimum distances to be observed

To prevent the water vapor, that is emitting from the steam distribution pipe, from condensing on downstream system components, a minimum distance to the steam distribution pipe must be observed (depends on the humidification distance " B_N ").

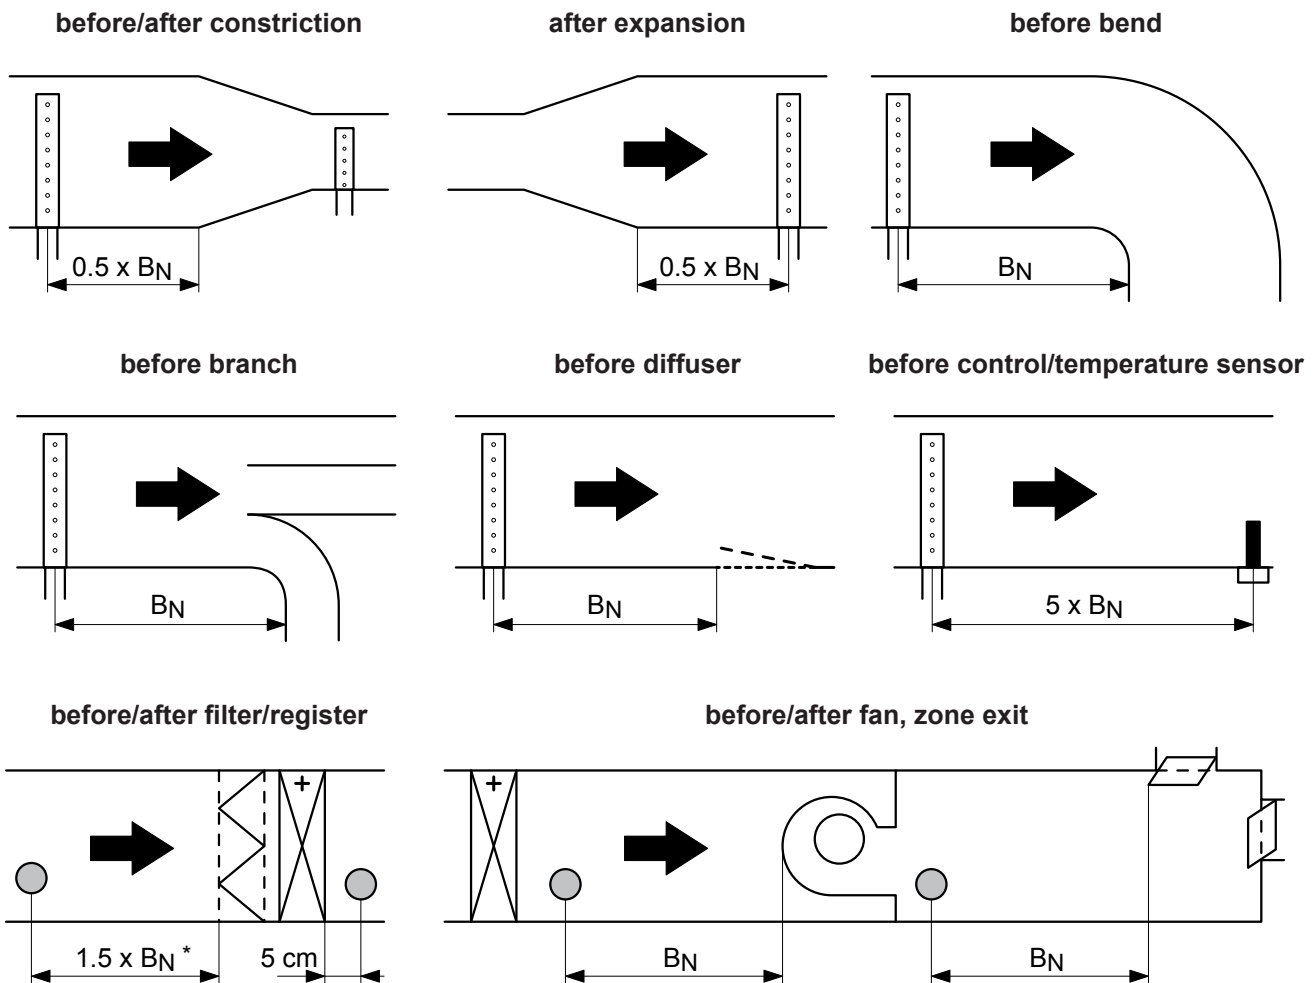

* $2.5 \times B_N$ before submicron particle filter


Installation notes and dimensions

The steam distribution pipes are designed for either **horizontal** installation (on the duct wall) or, with accessories, for **vertical** installation (in the duct floor). The **outlet orifices should always point upwards and at right angles to the airflow**.

If possible, the steam distribution pipes should be installed on the **pressure side** of the duct (**max. duct pressure 1700 Pa**). If the steam distribution pipes are installed on the suction side of the duct, the **maximum vacuum must not exceed 800 Pa**.

Select a location for the installation, tailored to suit your duct (see the following illustrations) and position the steam distribution pipes in the duct so that a uniform distribution of steam is achieved.


In positioning the steam distribution pipes, the following dimensions should be observed:

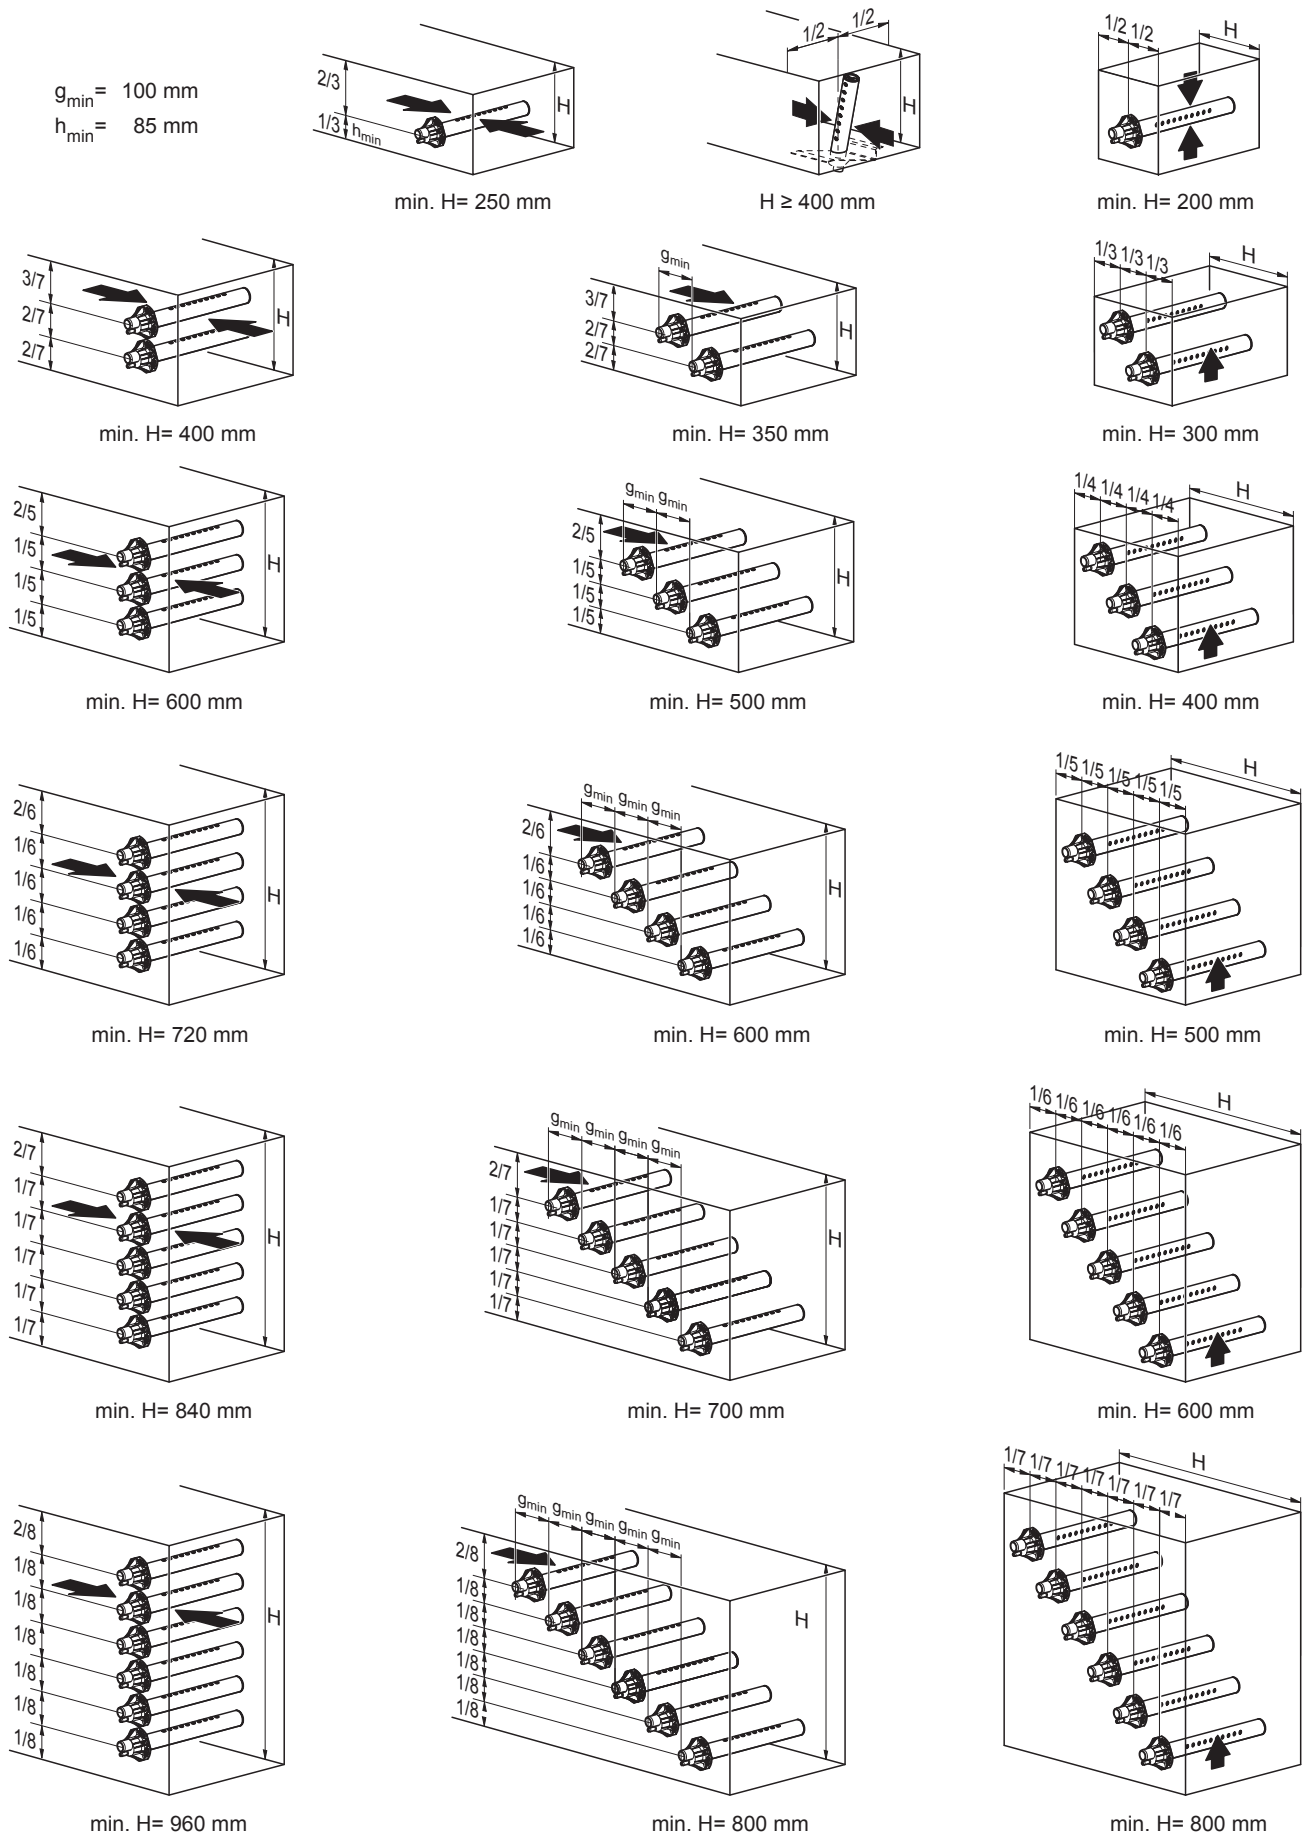

Note: When locating the OptiSorp steam distribution system please note the instructions in the separate documentation for this product.

Guidelines for dimensioning the ventilation ducts

- To facilitate the installation of the steam distribution pipes and for control purposes, a sufficiently sized control opening should be planned.
- Within the range of the humidification distance, the ventilation duct should be waterproofed.
- Low temperature ducts below 15°C, shallow ducts, or branch ducts might require the use of a field supplied condensate drain pan below the steam distributor (see figure below).

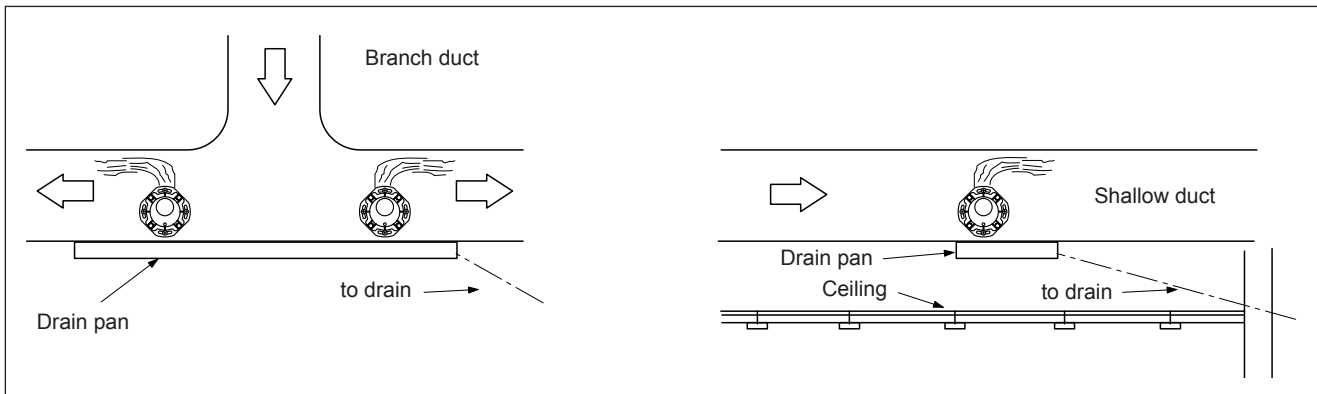

- Air ducts passing through cold rooms should be insulated to prevent the humidified air from condensing along the duct wall.
- Poor airflow conditions within the air duct (e.g. caused by obstacles, tight bends, etc.) can lead to condensation of the humidified air.
- Steam distribution pipes must not be mounted to round ducts.
- Exercise extreme caution when installing in fiberglass or internally lined ducts. If necessary, remove 10-15 cm of the lining where the steam is being introduced.


If you have questions relating to the dimensioning of ventilation ducts in combination with Condair steam humidifiers, contact your Condair supplier.

Installing the steam distribution pipes/OptiSorp steam distribution system

Detailed information on the installation of steam distribution pipes and OptiSorp steam distribution system can be found in the separate “Mounting Instructions” for this products.

5.3.2 Installing the main steam pipe

The steam pipe between the steam outlet of the unit and the steam hose adapter (main steam pipe) must be made with solid piping.

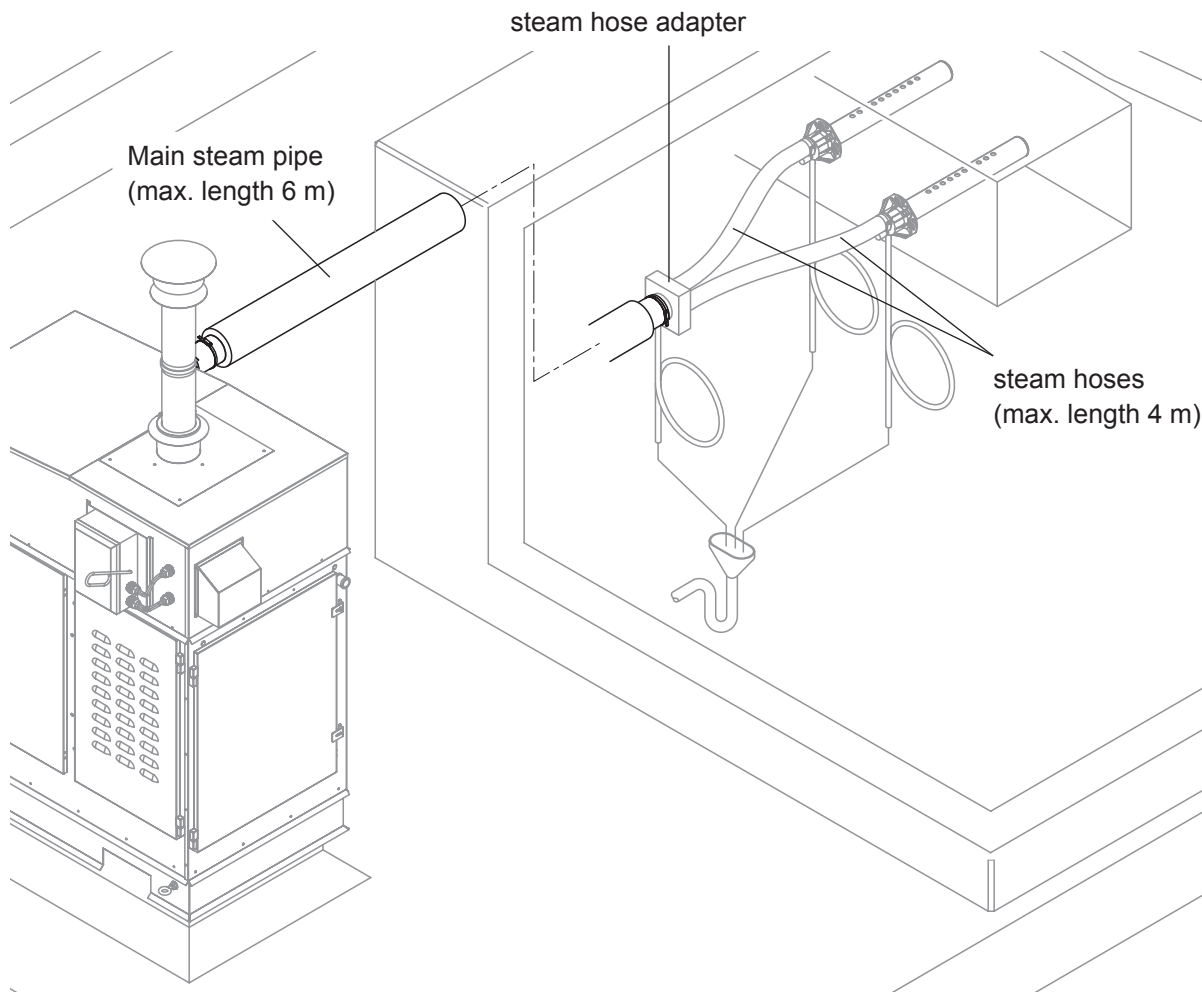


The following notes must be observed:

- The internal diameter of the steam outlet on the unit must be maintained over the entire length of the main steam piping.
- The maximum length of the main steam pipe is 6 m.
Important! Allowance must be made for a **pressure loss of 10 mm water column (approx. 100 Pa)** per meter length or per 90° bend.
- The **minimum bend radius** for solid pipes is **4-5 x internal diameter**. 90° bends should be avoided. Wherever possible, pipe bends with large radius should be used (e.g. produced using a pipe bending machine, or constructed from a pair of 45° bends). This reduces the performance loss due to the formation of condensate, and in addition, the static pressure in the steam line.
- Use Cu pipe (for operation with untreated drinking water only) or stainless steel pipe (min. DIN 1.4301) exclusively.
- To minimize the condensate formation (= loss), the steam pipes must be insulated over the entire length of the piping.
- Connection of the steam pipe to the steam outlet on the unit and the connection on the steam hose adapter is effected by means of short lengths of steam hose secured with hose clamps.
- At spots where condensate could accumulate inside the pipe a condensate drain with siphon (min. hose bend Ø200 mm) must be mounted.


5.3.3 Installing the steam hoses between steam hose adapter and steam distributors

Important! Use original Condair steam hose exclusively. Other types of steam hoses can cause undesired operational malfunctions.

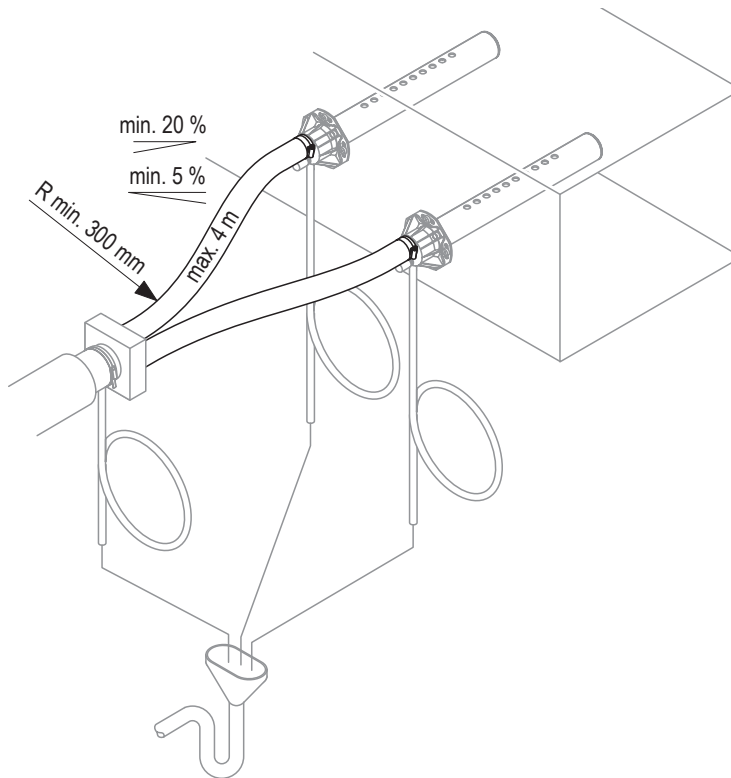

The following notes must be observed:

- Lead the steam hose with an **upslope of at least 20%** or with a **minimum downslope of 5%** to the steam distribution pipe.
- The steam hose should be kept as short as possible (**ideally 2 m, max. 4 m**) while observing the **minimum bend radius of 300 mm**. **Important!** Allowance must be made for a **pressure loss of 10 mm water column (approx. 100 Pa)** per meter steam hose.
- Reductions in the cross section such as kinks should be avoided throughout the entire length of the hose. The installation of a stop cock in the steam hose is not permissible.
- Steam hoses must be prevented from sagging (condensate pockets); if necessary, support with pipe clamps, rails or wall brackets. If sagging can not be prevented (e.g. when passing by obstacles) a condensate drain with siphon (min. hose bend $\varnothing 200$ mm) must be mounted at the lowest point of the steam hose (see following illustration).

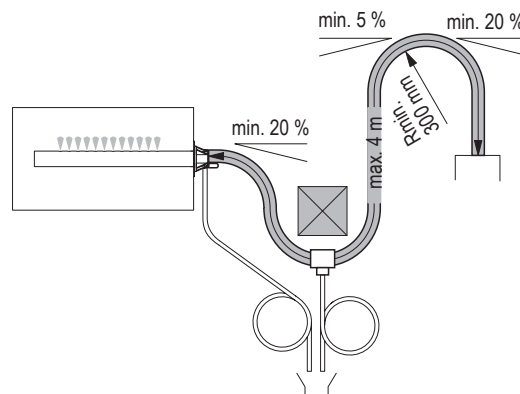

- **Important!** When deciding on the length and layout of the hose, it should be noted that the steam hose may become somewhat shorter with progressive ageing.

Securing the hose


The steam hose must be secured to the steam distribution pipe and humidifier steam outlet by means of **hose clamps**.

Steam line with fixed piping

For steam lines with fixed piping, the same instructions apply to the laying of the piping as already described. The following additional notes should be observed:

- The **minimum internal diameter of 45 mm** should be applied over the whole length of the piping.
- Use exclusively Cu pipe (for operation with untreated drinking water only) or stainless steel (min. DIN 1.4301).
- To minimize the condensate formation (=loss), the steam pipes must be insulated.
- The **minimum bend radius** for solid pipes is **4-5 x internal diameter**.
90° bends should be avoided. Wherever possible, tube bends with large radii should be used (e.g. produced using a tube bending machine, or constructed from a pair of 45° bends). This reduces the performance loss due to the formation of condensate, and in addition, the static pressure in the steam line.
- **Important!** Allowance must be made for a **pressure loss of 10 mm water column (approx. 100 Pa)** per meter length or per 90° bend.
- Connection of the steam pipes to the steam distribution pipe and steam humidifier is effected by means of short lengths of steam hose secured with hose clamps.

5.3.4 Installing the condensate hoses

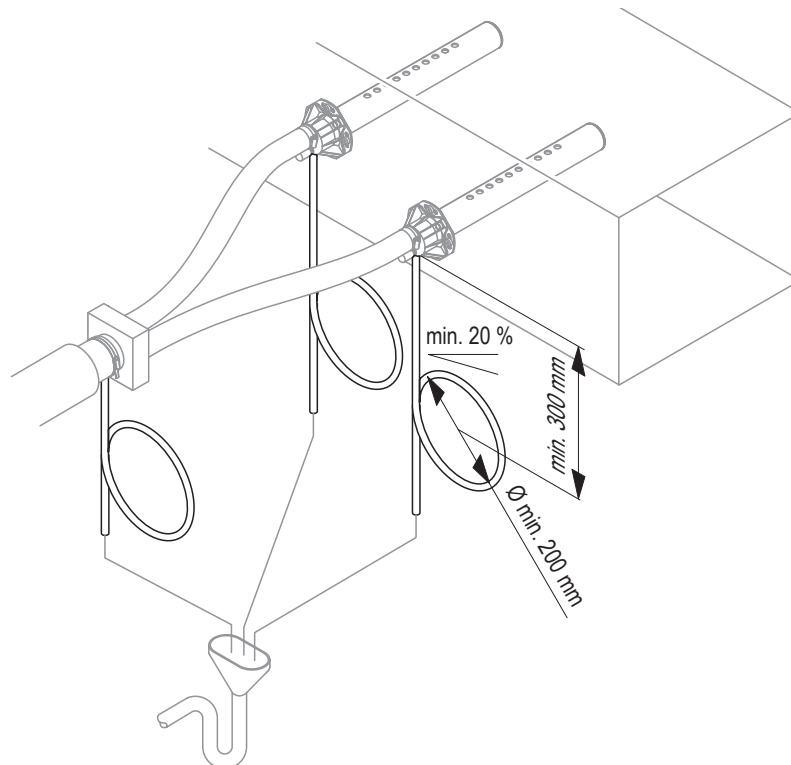

Important! Use original Condair condensate hose exclusively. Other types of hoses can cause operational malfunctions.

The individual condensate hoses of the main steam pipe (if present), the steam hose adapter (if present) and the steam distribution pipes must be led down with a **minimum downslope of 20 %** via a siphon (min. hose bend $\varnothing 200$ mm) into a discharge funnel.

Important! Before putting the unit into operation, the siphon of the condensate hose must be filled with water.

5.4 Water installation

All installation work must be carried out in accordance with the **locally applicable water installation regulations**.




All work concerning the water installation must be performed only by **adequately qualified personnel** (e.g. plumbers).

Warning - danger of electric shock! For all installation work, the Condair GS...OC must be disconnected from the mains supply and **secured against unintentional reconnection**.

5.4.1 Performing the water installation

Overview water installation

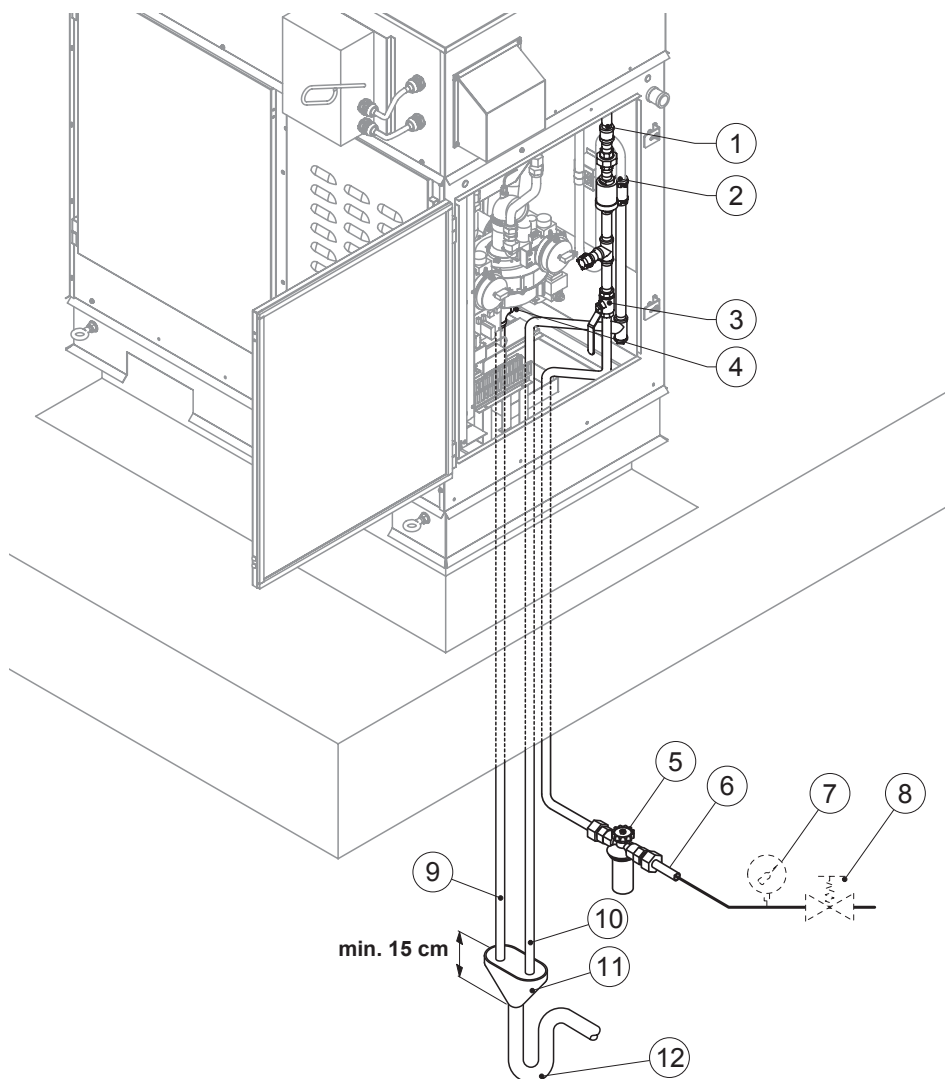

- | | |
|---|--|
| 1 Filling water connection BSP 1/2" (outside thread) | 8 Pressure reducing valve (compulsory for water pressures >8 bar, building side) |
| 2 Water drain connection 3/4" | 9 Auxiliary drain line BSP 1/2", building side |
| 3 Shut-off valve (installation recommended, building side) | 10 Drain line BSP 3/4", building side |
| 4 Auxiliary water drain connection BSP 1/2" (inside thread) | 11 Funnel (building side, min. height 15 cm) |
| 5 Filter valve (accessory "Z261") | 12 Siphon (min. inner ø: >45 mm, building side) |
| 6 Filling water supply line (min. inner ø: 12 mm) | |
| 7 Manometer (installation recommended, building side) | |

Water supply

The water supply pipe is to be connected via the **filter valve** (accessory "Z261"), to the connection on the unit (see foregoing illustration). The filter valve should be installed as close to the humidifier as possible.

Note: Instead of the filter valve, a **shut-off valve** and a **water filter 5 µm** (both essential) can be used.

The following specifications must be observed:

- Connections on unit: **BSP 1/2"** (outside thread)
- Min. inner diameter of supply line: **12 mm**
- Admissible mains pressure **3.0 to 8.0 bar** (hammer-free system)
For mains pressures >8 bar, connection must be made via pressure reducing valve (adjusted to 3.0 bar). For mains pressures <3.0 bar please contact your Condair supplier.
- Supply rate: **10 l/min**
- Admissible supply temperature: **1...30 °C**
- **Notes on water quality:**
 - For the water supply of the Condair GS...OC, use exclusively **untreated drinking water** or **fully demineralized water**.
Note: The use of fully demineralized water reduces the maintenance and the cleaning of the water tank to a minimum.
 - The use of **additives** such as corrosion inhibitors, disinfectants, etc. is **not allowed**, since these additives may endanger health and affect proper operation.
 - If the Condair GS...OC shall be operated with softened or partly softened water, please contact your Condair supplier.
- The connection material must be **pressure-proof** and **certified for use in the drinking water supply**.



Caution! Fully demineralized water is aggressive. When making connections to a fully demineralized water system, use **exclusively plastic or stainless steel installation materials** (min. DIN 1.4301).

- **Important!** Before connecting the water line to the unit, the line must be flushed thoroughly.

Water drain and auxiliary water drain

Both **drain lines** should be connected to the corresponding connection on the unit using a hose coupling. Lead the drain lines via the pipe chase downwards into an **open drain funnel** (min. height 15 cm) inside the building. The drain funnel is then connected via a **siphon** to the building drain line. The minimum internal diameter of 45 mm must be maintained over the full length of the building drain line. Make sure that the drain line is correctly attached and easily accessible for the purpose of inspection and cleaning. The following connection data should be observed:

- Connections on unit (hose connection):

BSP 3/4" (ø26 mm) drain connection, BSP 1/2" (ø21 mm) auxiliary drain connection



Warning! Use only **temperature-resistant** installation materials!

Caution! When using fully demineralized water, only **stainless steel** (min. DIN 1.4301) or **chemically-resistant plastic (e.g. Polypropylene)** connection components must be used.

- Drainage capacity: **approx. 20 l/min**
- Min. inner diameter of the building drain line: **45 mm**
- Min. downslope after siphon: **10 %**
Note: It is not permissible to curve the drain pipe upwards, because this can lead to the collection of deposits at the lowest point in the pipe and to the blockage of the pipe.

5.5 Gas installation

All installation work must be carried out in accordance with **the applicable local building and installation regulations**.




All work concerning the water installation must be performed only by **adequately qualified personnel** (e.g. plumbers). Ascertaining the qualifications is the customers responsibility.

Warning - danger of electric shock! For all installation work, the Condair GS...OC must be disconnected from the mains supply and **secured against unintentional reconnection**.

5.5.1 Performing the gas installation

Overview Gas installation

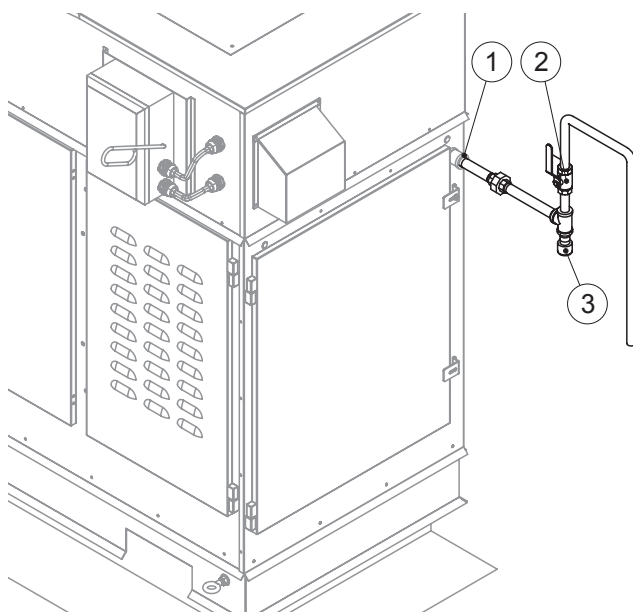

1 Gas supply connection

Model	Connection
GS 40 OC	BSP 1/2"
GS 80 OC	BSP 3/4"
GS 120 OC and GS 160 OC	BSP 1"
GS 200 OC and GS 240 OC	BSP 1 1/4"

2 Gas shut-off valve (building side)

3 Sediment trap

(Installation - building side - essential in the case of the use of steel gas pipes)

Installation notes

The gas supply pipe must be connected to the connection on the unit via a shut-off valve (essential requirement), which is installed in the immediate vicinity of the unit. **When steel gas pipes are in use, it is essential that a sediment separator be fitted** between the shut-off valve and the unit connection. The following connection data must be adhered to:

- Permissible gas operating pressure

Gas		Operating pressure (mbar)		
		Nominal	Min	Max
Natural gas H, E, E(S)	G20	20	17	25
Natural gas L, ELL	G25	25	20	30
Natural gas HS	G25.1	25	20	30
Natural gas Lw	G27	20	17.5	23
Natural gas Ls	GZ350	13	10.5	16
Propane Gas P	G31	37 or 50	25	57.5

- The connection material used must be **pressure tested** and **approved for gas installations**.
- **Do not** use teflon tape on gas line pipe threads. A flexible sealant suitable for use with Natural Gas and Propane Gas is recommended.
- Plan gas supply piping so it will not interfere with removal of gas valves or blower assemblies and front or side service doors.

5.5.2 Leak testing

After completion of the installation work, the whole gas line must be tested to a **maximum pressure of 40 mbar (4.0 kPa) for natural gas or 150 mbar (15 kPa) for propane** and checked for leaks using a commercially available soap solution. The bubbles indicate leaks. All leaks must be eliminated before the humidifier is put into operation.



Caution! Never use an open flame to check for leaks. The presence of any leakage is a source of danger to persons and to property, due to the possibility of fire and explosion.

If the gas circuit must be tested to a pressure of over 150 mbar (15 kPa), the gas supply pipe must be removed from the unit connection. After the test, the gas line must be depressurized before it is reconnected to the unit.



Caution! Non-observance of the above instruction can lead to damage to the gas pressure regulating valve. Gas pressure valves overloaded due to high pressure are not covered by the manufacturer's guarantee.

5.5.3 Conversion instructions for operating the humidifier with another type of gas


Ex works the appliance is equipped to operate on one type of gas. To convert an appliance for operation on another type of gas, follow the directions below (see also illustration on the following page).



The conversion shall be carried out by a manufacturer's authorized representative or person trained and licenced for such activities, in accordance with the requirements of the manufacturer or local authorities having jurisdiction in the area of installation.

1. Disconnect the humidifier from the electrical power supply and take precautions against inadvertent switching on.
2. Turn off gas supply to appliance and secure it against inadvertent opening.
3. Undo the brackets and open the right side panel(s).
4. Disconnect the hose from the inlet elbow (note the layout). Then, loosen the hose clamp and remove the inlet elbow.
5. Undo the coupling of the corresponding flexible gas pipe and disconnect gas pipe from the gas pressure regulating valve.
6. Disconnect electrical cables to the gas pressure regulating valve and the air pressure switch (note assignment before removal).
7. Undo the two screws that mount the venturi manifold to the combustion air blower, then lift up the manifold together with the gas pressure regulating valve.
8. Undo the four screws and remove the gas pipe connection of the gas pressure regulating valve.
9. Undo the three screws of the air pressure switch support and remove the pressure switch assembly from the gas pressure regulating valve.
10. Check the cork gasket and the O-ring in the gas pipe connection for damage and replace if necessary.
11. Attach the gas pipe connection (with mounted O-ring) and the pressure switch assembly to the gas pressure regulating valve supplied (comes with venturi manifold attached).
Warning! Make sure the gas type indicated on the label of the venturi manifold corresponds to the gas you are using. **Do not change the setting of sealed adjustment screw "A".**
12. Fix the new venturi manifold (don't forget the cork gasket) together with the gas pressure regulating valve with the two screws to the combustion air blower.

13. Reconnect the flexible gas pipe to the gas pressure regulating valve and tighten the coupling.
14. Fix the inlet elbow with the hose clamp to the venturi manifold.
15. Reconnect the hose between the air pressure switch and the inlet elbow.
16. Reconnect the electrical cables to the gas pressure regulating valve and the air pressure switch.
17. On multiple burner units repeat steps 4 to 16 for each gas valve assembly.

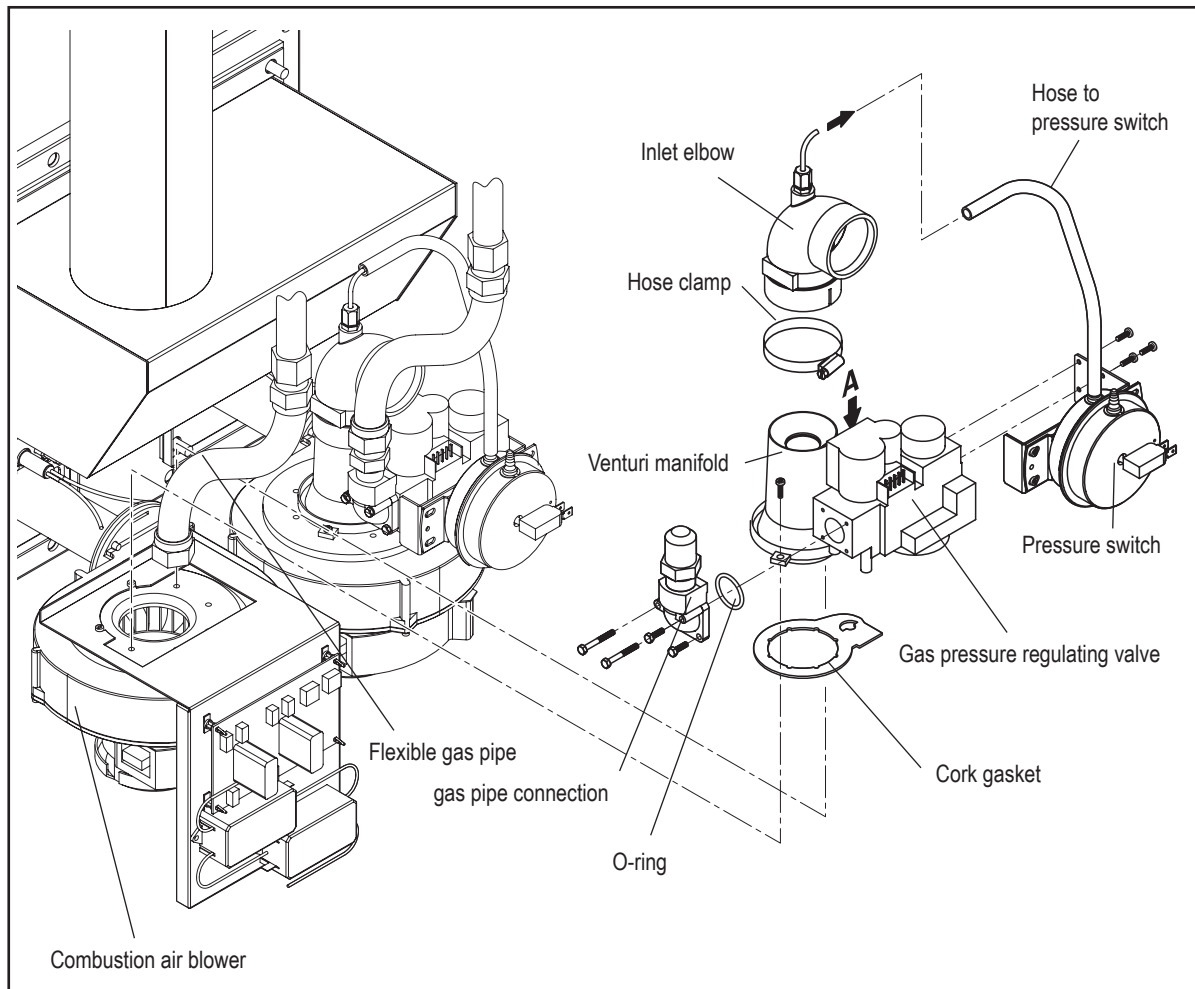

18. Carry out a leakage test (Refer to instructions in 5.5.2).
19. Turn power to unit back on and initiate a test fire sequence to check for proper ignition characteristics.
20. If tests are acceptable, affix appropriate conversion label to data plate. Close door panel(s) and secure with the brackets. Then, return unit to normal operation.
21. Conversion is now complete.

5.6 Flue gas installation




Warning! Since the regulations for the installation of flueing systems differ from country to country, **the relevant local regulations must be adhered to without reservation.**

All work concerning the flue pipe installation must be performed **only by adequately qualified personnel**. Ascertaining the qualifications is the customers responsibility.

5.6.1 Performing flue gas installation

Overview

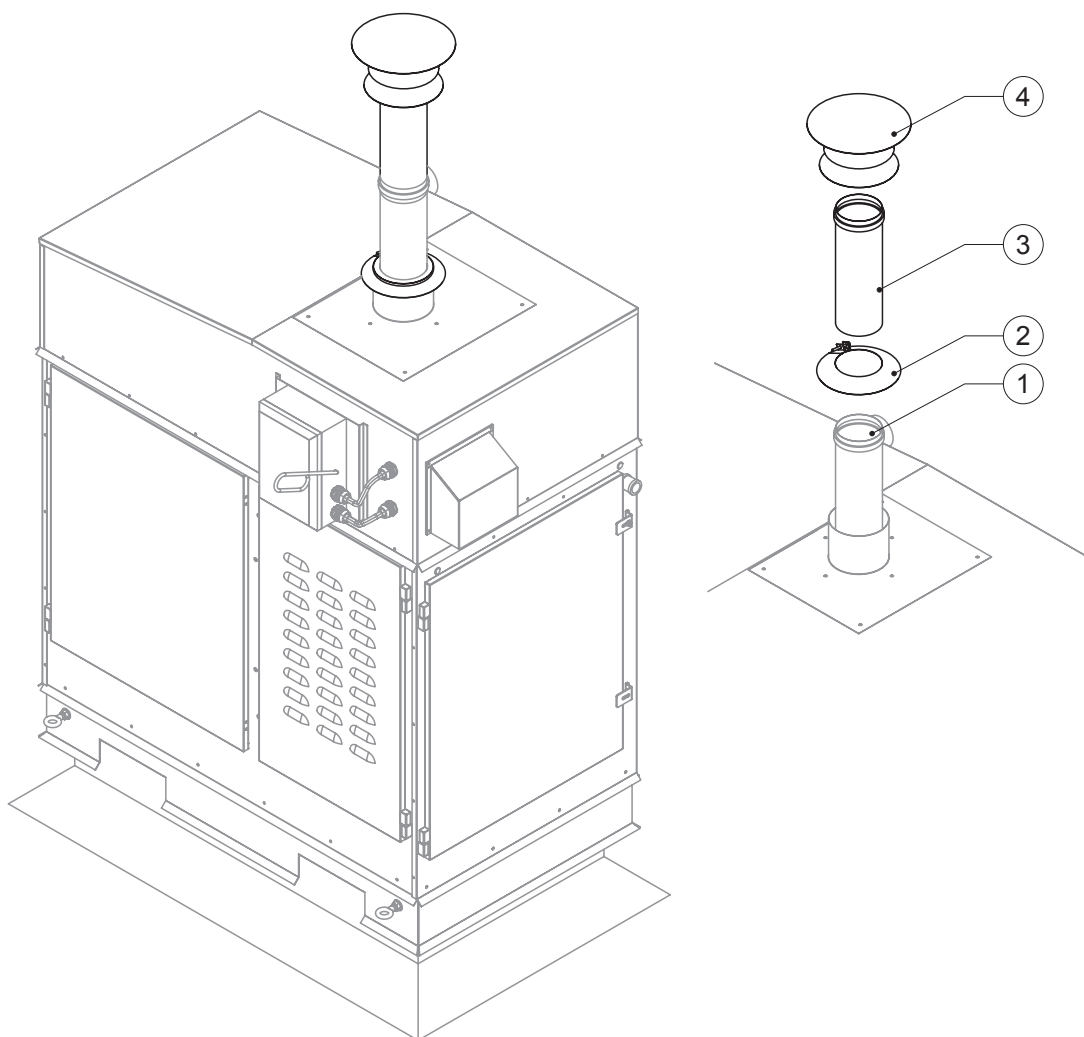

- 1 Flue gas connection on the unit
 - GS 40 OC: $\varnothing 76$ mm (3")
 - GS 80 OC: $\varnothing 101$ mm (4")
 - GS 120 OC/GS 160 OC: $\varnothing 127$ mm (5")
 - GS 200 OC/GS 240 OC: $\varnothing 152$ mm (6")
- 2 Storm collar (included in the delivery)
- 3 Flue gas pipe extension (included in the delivery)
- 4 Rain cap (included in the delivery)

Installation notes

The following instruction notes must be observed:


- **Flue gas specifications: ---> see table in chapter 10.2**
- The flue gas temperature during normal application and when the maintenance schedule is fulfilled is between 160 - 180 °C. If the unit is not maintained properly the flue gas temperature could increase. In this case the temperature switch would shut down the unit if the temperature exceeds 200 °C for safety reasons.
- Use the supplied flue gas pipe with storm collar and rain cap exclusively.
- The supplied flue pipe extension and the rain cap have built-in mechanical locking band and gasket. Simply push each component to the stop bead, which provides an air- and water-tight seal. Then, tighten the integrated locking band on each component to complete the installation of the flue gas venting.
- Make sure the rain cap is at least 60 cm above any ridge within 3 m of the unit.
Note: if the flue gas venting needs to be longer for any reason please contact your Condair representative.

5.7 Installation of control and monitoring devices

- Install the **room humidity sensor** and the **safety humidistat** at the same height as thermostats and in a location where the measured humidity corresponds to that of the room. Under no circumstances should the humidity sensors be positioned in the vicinity of the air flow from ventilator units or air intake grids. Do not mount humidity sensors on an outer wall, where temperature fluctuations can affect the control behavior.
- Install the **duct humidity sensor** in a position where the measured humidity corresponds to that of the room that is being humidified (usually in the duct return circuit). Do not position humidity sensors in the immediate vicinity of steam distribution pipes, nor in sections of a duct subject to air turbulence, nor within the path of the humidification process itself.
- Install the safety humidistat in the duct, after the steam distribution pipes and far enough away from these, that all the steam has been absorbed into the air (minimum distance 3 m). The safety humidistat must be positioned such that it only detects that the humidity is too high when the room humidity is in reality too high or has reached the saturation limit.
- Install the flow monitor such that reliably detects the existence of an airflow and the absence of an airflow. Connect it in such a way, that the circuit is closed when airflow is present and opens when there is no airflow.
- Before starting the humidifier, check all control and monitoring devices for correct function.
- Calibration of the control and monitoring devices (On/Off and continuous) following the installation is recommended. The accuracy of the humidity sensor and the safety humidistat must always be checked before commissioning the humidifier system.

5.8 Electrical Installation

Wiring diagram

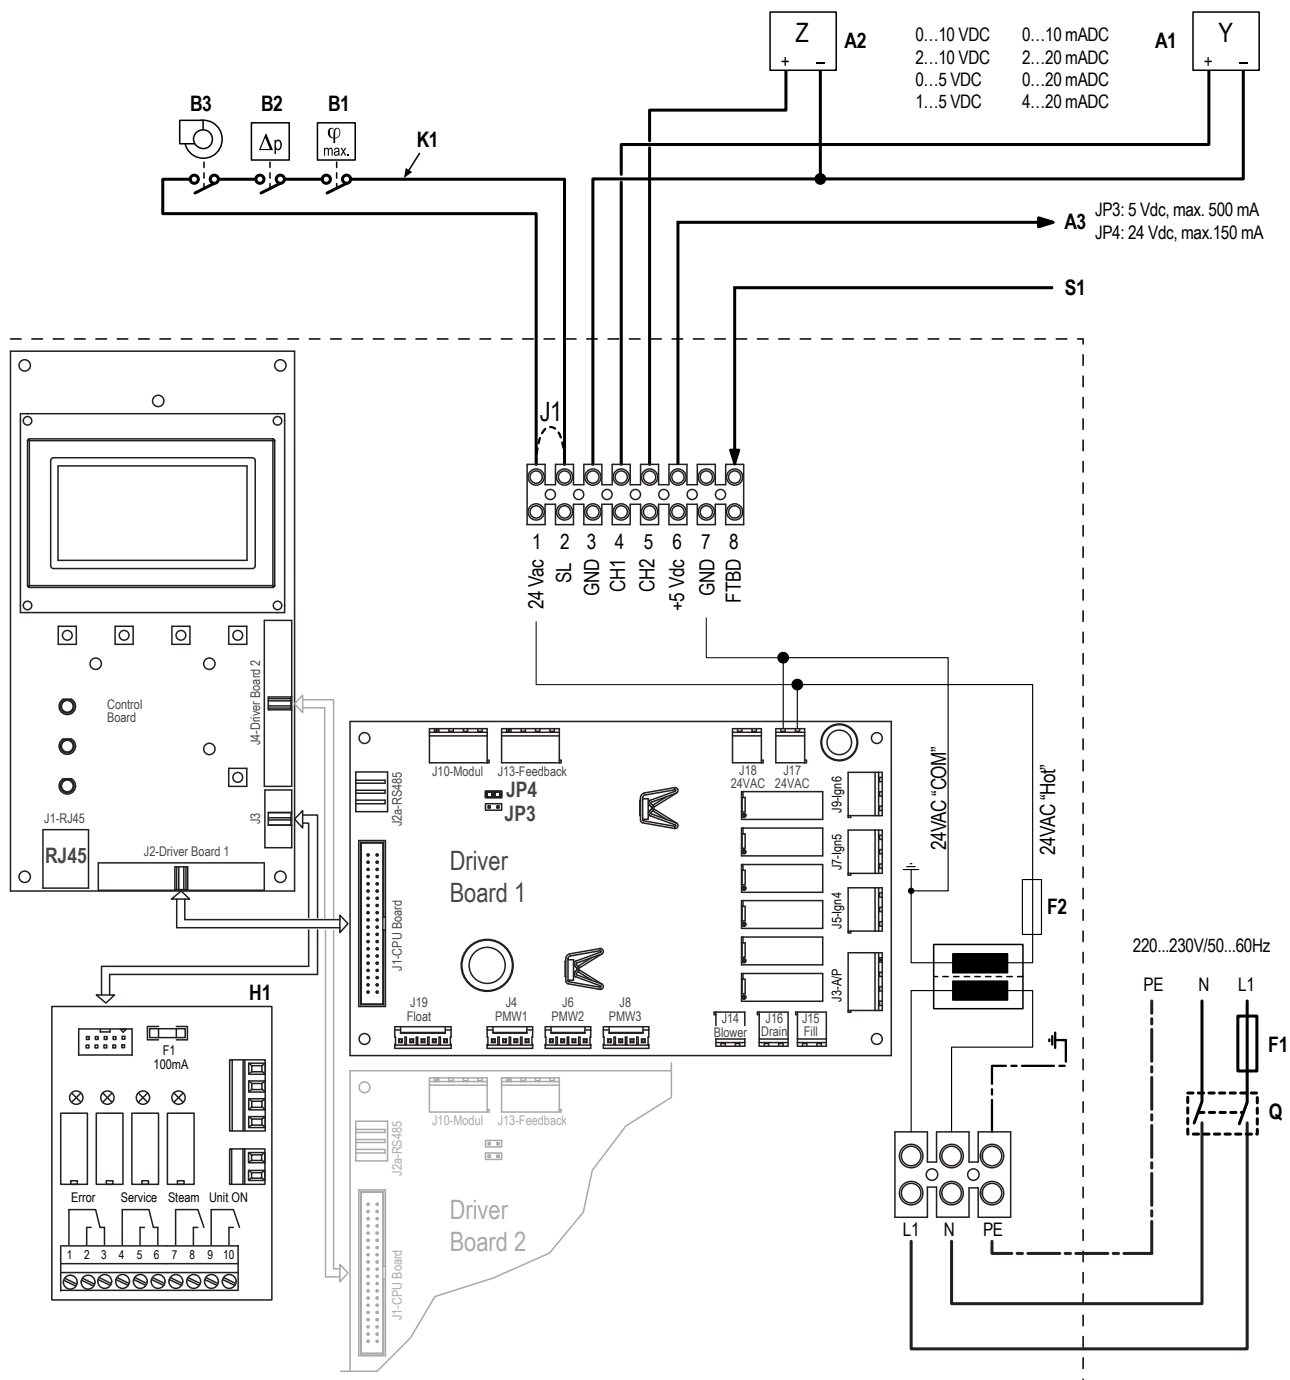

- | | | | |
|-----------|--|-------------|--|
| A1 | Control or sensor signal Y
(signal type set via control software) | H1 | Remote operating and fault indication |
| A2 | Control or sensor signal Z (air supply limit signal)
(signal type set via control software) | J1 | Cable bridge (if no monitoring devices are connected) |
| A3 | Output 24 Vdc (JP4) or 5 Vdc (JP3) | JP3 | Jumper (to set output A3 to 5 Vdc max. 500 mA) |
| B1 | Safety high limit humidistat (building side) | JP4 | Jumper (to set output A3 to 24 Vdc max. 150 mA) |
| B2 | Flow control (building side) | K1 | External safety loop (24 Vac) |
| B3 | Ventilation interlock (building side) | Q | External service switch or plug-type connector |
| F1 | External Fuse (10 A, slow-acting, building side)
220...240 VAC power supply | RJ45 | Communication interface (for detailed informations
refer to the separate documentation) |
| F2 | Fuse (6 A, fast-acting) 24 VAC power supply | S1 | Full tank blow down (24 Vac) |

Notes on electrical installation

All work concerning the electric installation must be performed only by adequately qualified personnel (electrician or workman with equivalent training). Ascertaining the qualifications is the customer's responsibility.

Observe all **local regulations** concerning the electric installation.



Warning - danger of electric shock! The steam humidifier may be connected to electric mains only after all installation work has been completed.



Attention! The electronic parts inside the humidifier are very sensitive to electrostatic discharge. To prevent damage, **appropriate measures against electrostatic discharge (ESD protection)** must be taken when carrying out installation work.

Please observe the following installation notes regarding the electrical installation:

– Primary wiring

Humidifiers require field wiring to primary voltage terminal blocks. Power requirement is 220...240V/50...60Hz, 10 A slow-acting fused ("**F1**") circuit, single phase. Wiring is fed through a 22 mm hole in the bottom of the control compartment. Installation of **external service switch "Q"** (all pole disconnecting device with a minimum contact opening of 3 mm) **is mandatory. The service switch "Q" must be mounted in the separate compartment outside the unit, above the electrical service door.**

When installed, the appliance **must be electrically grounded in accordance with local codes, if an external electrical source is utilized.**

Connect ground wire to cabinet ground clamp.

External wiring sizes must be in accordance with existing local electrical codes and by-laws.

– Remote operation and fault indication

The remote operation and fault indication board is equipped with 4 relays for remote operation and fault indication.

- "On": this relay closes after the humidifier has been powered up
- "Steam": this relay closes as soon as steam is produced
- "Service": this relay closes when the set maintenance interval has expired
- "Error": this relay closes when an error occurs

– External safety circuit (K1)

To guarantee the safety of the humidification system, monitoring the operation by means of a safety circuit is an absolute requirement. To accomplish this, the potential-free contacts (250V/2A) of external monitoring devices (B1: safety high limit humidistat, B2: airflow monitor, B3: ventilation interlock, etc.) are connected in series to **terminals 1 and 2.**

– Control or sensor signal

The signal line (signal Y) is connected to **terminals 3 and 4.** The signal line (signal Z) is connected to **terminals 3 and 5.** By default the Condair GS is configured for a 0...10 VDC control signals. The control signal type can be modified via the software (see menu "user settings", in the operating instructions for the Condair GS control). The configuration whether the Condair GS is controlled via the internal or via an external controller is also done via the software.

- **Output (A3)**

This output is available for custom purposes. The lines are connected to **terminals 6 and 7**. The output signal type is configured by setting the jumper on JP3 (5 Vdc max. 500 mA) or on JP4 (24Vdc max. 150 mA).

- **Full tank blow down 24 VAC (S1)**

This input signal can be used for remote triggering a full tank blowdown. If a 24 VAC signal is present for more than 60 seconds the tank blows down. The signal line is connected to **terminals 8 and 7**.

6 Inspecting the installations (Check list)

Before the Condair GS...OC is operated for the first time, the responsible personnel must **inspect all installations for correct execution (observing of local regulations)** and check that the **unit is correctly configured**. All deficiencies must be corrected by specialist action before commissioning takes place.

Use the following check list to ascertain that the installations were performed correctly:

– Unit installation

- ☐ Is the unit in the correct place (see chapter 5.2.1)?
- ☐ Is the unit correctly aligned vertically and horizontally?

– Steam installation

- Steam distribution pipe
 - ☐ Steam distribution pipe correctly positioned and secured (screws tightened)?
 - ☐ Are the outlet orifices at right angles to the air flow direction?
- Steam pipe between steam outlet on unit and steam hose adapter (main steam pipe)
 - ☐ Maximum length of 6 m?
 - ☐ Minimum bend radius of 4-5 x internal diameter of solid steam pipe?
 - ☐ Is the pipe properly insulated?
 - ☐ Is the correct installation material used?
 - ☐ Is the minimum internal diameter maintained over the entire pipe length?
- Steam hose between steam hose adapter and steam distributor
 - ☐ Maximum length of 4 m?
 - ☐ Minimum bend radius of 300 mm (4-5 x internal diameter with fixed piping)?
 - ☐ Have the instructions for hose positioning been followed?
 - ☐ Steam hose: no sagging (condensate pocket)?
 - ☐ Rigid steam lines: properly insulated? Correct installation material used? Minimum internal diameter maintained?
 - ☐ Steam hose securely attached with clamps?
 - ☐ Heat expansion during operation and shortening of the hose with ageing taken into consideration?
- Condensate hoses
 - ☐ Downslope of at least 20 %?
 - ☐ Siphons existing and filled with water?
 - ☐ Condensate hoses correctly fixed?

– Water installation

- Filling water supply
 - ☐ Has filter valve (accessory “Z261”) or shut-off valve and filter 5 µm respectively been installed in supply line?
 - ☐ Have admissible water pressure (3.0 – 8 bar) and temperature (1 – 30 °C) been observed?
 - ☐ Does supply capacity match the humidifier(s)?
 - ☐ Is the piping properly secured and sealed?

- Water drain and auxiliary water drain
 - ☐ Has minimum inside diameter of drain pipe (at least 45 mm) been maintained throughout the entire length?
 - ☐ Have drain pipes been installed with a downslope of at least 10 %?
 - ☐ Have temperature-resistant materials been used (up to 100°C)?
 - ☐ Are the hoses and pipes correctly attached and sealed (hose clamps and screwed connections tightened)?
 - ☐ Is the minimum funnel height of 150 mm observed?
- **Gas installation**
 - ☐ Is the shut-off valve fitted?
 - ☐ Is a sediment separator installed, if steel pipes are used?
 - ☐ Is the gas circuit correctly sealed (leakage check carried out)?
 - ☐ Is the permissible gas pressure being maintained (see the table in 5.5.1)?
 - ☐ Have the correct sealing materials been used?
- **Flue gas system**
 - ☐ Is the supplied flue gas pipe with storm collar and rain cap used?
 - ☐ Are all connections of the flue gas pipe properly sealed and secured?
 - ☐ Does the flue gas system comply with the local regulations?
 - ☐ Is the flue gas outlet at least 60 cm above any ridge within 3 m of the unit?
- **Electrical installation**
 - ☐ Does the electrical installation comply with the local regulations?
 - ☐ Do the mains voltages applied correspond to the supply voltage stated on the rating plate of the unit?
 - ☐ Is the voltage supply correctly fused?
 - ☐ Is the service switch “Q” installed in the supply cable and located in the compartment outside the unit, above the electrical service door?
 - ☐ Are all components correctly connected in accordance with the wiring diagram?
 - ☐ Are all connection cables fixed?
 - ☐ Are the connecting cables free of tension (fitted through cable glands/secured with cable clamps?)
 - ☐ Is the Condair GS...OC correctly configured?

7 Operation

7.1 Safety instructions for operation

The Condair GS...OC must only be commissioned and operated by persons who are familiar with equipment and adequately qualified to undertake this work. Monitoring such qualification is a matter for the customer.

Initial commissioning must only be undertaken by the **Condair service technician** or by the customer's own specially trained personnel.



The safety instructions in Chapter 2 must be followed and adhered to!


Caution – Danger of electric shock! With the lid of the unit open, contact with current conducting components is a possibility. Before switching the service switch On in the electrical supply circuit, all covers on the unit must be closed and locked.

The following temperature ranges must be observed when operating the unit:

- unit powered on (external service switch on): **-25°C/-13°F to 35°C/95 °F**
- unit powered off (external service switch off): **0°C/32°F to 25°C/80°F**

Warning! If the unit is exposed to temperatures outside of the range for powered off condition, do not restart the unit. Before restarting the humidifier have a qualified service technician inspect the appliance and replace any defective part.

7.2 Function of the display and operating elements

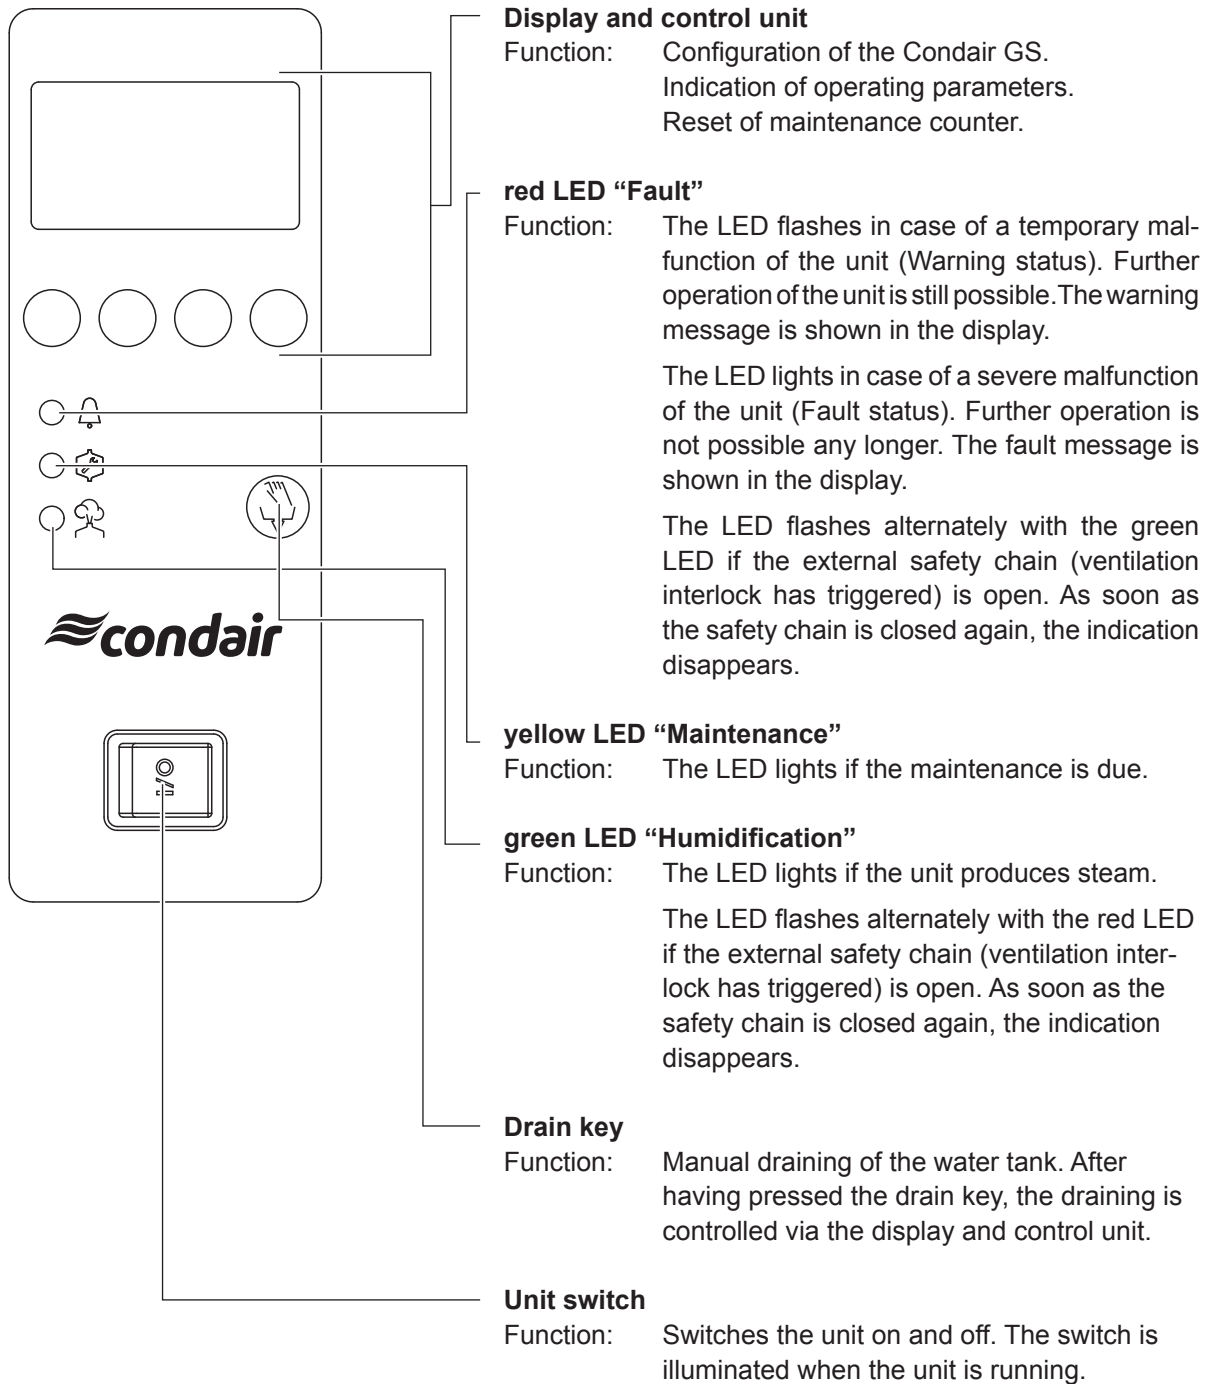

7.3 Commissioning and notes on operation



Caution! Before the Condair GS...OC is operated for the first time, the responsible personnel must **inspect all installations for correct execution** and check that the **unit is correctly configured (see check list in chapter 6)**. All deficiencies must be corrected by specialist action before commissioning takes place.

The humidifier is operated as follows:

- **Examine the humidifier and all installations for possible damage.**
Caution! Damaged units and units with damaged installations must not be operated.
- **Check the cleanliness of the outer cabinet:**
The panels may be cleaned with a damp cloth and warm soapy water.
Caution! Make sure no water is dripping into the cabinet through the ventilation openings in panels of the unit housing.
- **Fill the water tank:**
 - Close the shut-off valve in the gas supply line.
 - Open the shut-off valve in the water supply pipe.
 - Set the internal or the external regulator to maximum humidity demand.
 - Switch-on the service switch in the electrical supply circuit.
 - Switch-on the humidifier at the unit switch.
 - The filling valve opens and the water tank fills (filling time: approx. 30 minutes for the largest model, for smaller units the filling time is shorter). At the end of the filling cycle the control unit checks the function of the water level unit. If the control unit has verified the proper function of the water level unit the ignition sequence starts. After three attempts at ignition the auto ignition switches off. The red LED lights and a corresponding error message is shown in the display. Now switch the humidifier Off.
- **Check ignition safety switch-off:**

The regulator is still set to maximum humidity demand and the shut-off valve in the gas line is closed.

 - Switch-On the humidifier at the unit switch.

The combustion air blower(s) start(s). Note: On multi-blower units, wait until all blowers have started.

Then, 15 seconds later (pre-purging time) the igniter is activated and the gas pressure regulating valve opens. After 7 seconds the gas pressure regulating valve closes and the igniter is de-energized (due to missing ignition).

Note: On multi-burner units, this process is successively completed for all burners.

After three ignition attempts per burner (complete with pre-purging), the humidifier goes into safety lockout.
 - Open the shut-off valve in the gas supply pipe.

No gas should flow to the main burner. End of the test.
 - Switch-off the humidifier at the unit switch. Note: To reset the safety switch-off, switch-off the humidifier for at least five seconds and then switch it on again.
 - Adjust the humidity controller again to the set humidity value.

- **Pre-purge of the gas pressure regulating valve(s):**

- Disconnect all ignitors from the ignition modules.
- Switch-On the humidifier at the unit switch.

The combustion air blower(s) start(s). Note: On multi-blower units, wait until all blowers have started.

Then, 15 seconds later (pre-purging time) the gas pressure regulating valve opens for 7 seconds, then it closes again (due to missing ignition).

Note: On multi-burner units, this process is successively completed for all burners.

After three ignition attempts per burner (complete with pre-purging), the humidifier goes into safety lockout.


Note: To reset the safety switch-off, switch-off the humidifier for at least five seconds and then switch it on again.

Repeat this sequence minimum 2 times in order to make sure no air is left in the gas system.

- Switch-off the humidifier at the unit switch.
- Reconnect all ignitors to the ignition modules.


- **Start the humidifier:**

- Open the shut-off valve in the water supply pipe.
- Open the shut-off valve in the gas supply pipe.
- Switch on the external service switch.
- Switch the humidifier On at the unit switch.

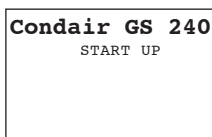


The Condair GS...OC carries out a **system and level test**, during which all the LEDs light up.

If a failure occurs on the system test, a corresponding error message is shown in the display.

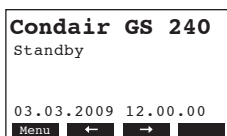

After the system test the unit is in **normal operation mode**. The display shows the **standard operating display** (first page of the indication level).

Note: The contents of the standard operating display depends on the actual operating status and on the configuration of the Condair GS and can differ from the opposite display.

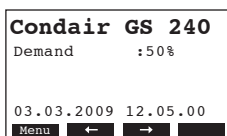

As soon as the humidity controller demands humidity, the combustion air blower(s) start(s). Then, 15 seconds later (pre-purging time) the ignition process for the burner(s) is started. The burner(s) ignite(s) and steam is generated in the tank via the heat exchanger(s). The green LED lights and the adjacent display is shown.

If no flame is detected by the flame sensor within 7 seconds after the ignition of a burner, the gas pressure regulation valve closes again. The ignition sequence is repeated a maximum of three times per burner. If no burner could be ignited, the humidifier goes into system lockout. The red LED lights and an appropriate fault message appears in the display. At the same time, the operating and remote fault alarm potential-free contact ("Error") closes.

Note: The system lockout is reset by switching the humidifier off briefly (5 seconds) and then on again.

If only individual burners of a multi-burner unit could not be ignited the humidifier remains operational. In the display a corresponding warning message appears in the display indicating which burner(s) has/have failed to ignite.

Note: for detailed information regarding the operation of the control unit and the configuration settings please observe the information given in the **separate operating instructions to the Condair GS control**.

Operating status display

The unit operating status is signaled via the display and the indicator LED's on the humidifier as well as via the remote operating and fault indication, as follows:

Operating status / meaning	Indication on unit	Activated remote relay
Warning present (humidification continuing)	Yellow LED lights. A warning message alternates with the normal operating mode display.	---
Fault occurred (humidification off)	Red LED lights. A fault message alternates with the normal operating mode display.	K1 (Error)
Steam production	Green LED lights. The normal operating mode display shows "ENABLED".	K2 (Steam)
Unit switched on and on standby	The normal operating mode display shows "STANDBY"	K3 (Power on) (No humidity demand)
Set maintenance interval has expired	Yellow LED lights. Maintenance due message is shown in the display.	K4 (Service)

Further note on operation

If the water level falls below a fixed minimum level during operation, the humidifier is automatically switched off to avoid overheating.

7.4 Taking out of operation

If the humidifier must be taken out of operation, e.g. for maintenance work, proceed as follows:

1. Close the shut-off valve in the gas supply pipe.
2. Close the shut-off valve in the water supply pipe.
3. Press the drain switch. The gas pressure regulation valve/s close/s and the tank empties.
Important! If drain pump is defective, drain tank manually via the auxiliary drain.
4. Wait until the water tank empties. Now switch off the humidifier at the unit switch.
5. Isolate the humidifier from the electrical power supply: Switch off the external service switch in the power supply circuit and secure the switch in the Off position to safeguard against unintentional switch-on.

Important! Make sure the ambient temperature is within the admissible range of 0°C (32°F) to 25°C (80°F) when the humidifier is isolated from the power.

8 Maintenance

All maintenance work must only be carried out by experienced and trained personnel, who are familiar with the procedures required.

The instructions and data relating to the maintenance work must be followed explicitly. The only maintenance work permitted is that described in this chapter.



Use only original Condair spares to replace defective components.

Before commencing the maintenance work, the Condair GS...OC has to be taken out of operation, as described in chapter 7.4 and secured against inadvertent start up.

Warning! Before carrying out maintenance or repair work under extreme weather conditions (e.g. rain, snow) protect the unit in a way that no electrical or other components inside the unit can get wet (cover unit with a tent).

8.1 Maintenance instructions

To maintain operating reliability, the Condair GS...OC **must be serviced at regular intervals**. Here, a distinction is made between the **first service after 500 hours of operation (I)**, the **minor service every time the maintenance alarm appears (II)** and the **annual maintenance (III)**.

Important! Depending on the hardness of the water and the average steam output, under certain circumstances it may be necessary to reduce the service interval for the minor maintenance work. If the **lime residues deposited on the floor of the tank exceed a height of 5 cm** the interval must be reduced. If the **height is less than 5 cm** the interval can be extended.

Important: Every service action must be documented in the "Maintenance" check sheet (a copy of this document is provided in these installation, commissioning and service instructions). Warranty is void if the specified maintenance intervals are not observed and the maintenance work are not carried out according the instructions.


The following is an overview of the work to be carried out at each of the service stages.

Components	Interval			Work required
	I	II	III	
Water tank	X	X	X	Drain the tank, then open it and measure the height of the lime residues on the tank floor (max. 5 cm). Remove the lime from the tank. Check all pipe connections to the tank (specially the level unit passages). Clean if necessary.
Water outlet pipes, including siphon	X	X	X	Press the drain switch and check for free drainage. Inspect all pipes for lime deposits and for correct sealing. Clean or replace pipes with lime deposits. Reseal/replace leaking pipes.
Water installation	X	X	X	Check all water hoses in the unit for cracks and correct fixing, replace defective hoses. Check supply pipes for sealing, seal if necessary. Clean the filter valve (or water filter). Check correct function of level unit. Clean or replace if necessary.
Unit inner chamber	X	X	X	Check the inner chamber for dirt and deposits and clean if necessary.
Steam installation	X		X	Inspect the steam and condensate hoses for cracks and correct fixing, replace defective hoses.
Electrical installation	X		X	Check all cables in the unit for secure fixing and condition and check the insulation.

Components	Interval			Work required
	I	II	III	
Flue gas temperature sensor	X		X	Visual check that sensor is intact, wired and attached to the exhaust.
Flue gas outlet pipe	X		X	Check flue gas outlet pipe for sealing and remove all traces of condensate. If specified, have the flue gas system inspected by an appropriate specialist.
Igniter and flame sensor			X	Every year or every 2000 hours (which is reached first). Remove and replace igniter and flame sensor (special spares set "Burner parts subject to wear").
Burner / combustion air blower			X	Remove burner and inspect the condition of burner mat. Blow out burner mat with compressed air or replace burner if necessary. Replace all burner seals with new ones (special spares set "Burner parts subject to wear"). Clean combustion air blower if necessary. The electric motors of the blowers are provided with permanent lubrication and do not require maintenance.

8.2 Dismantling work for maintenance and the replacement of components

Prepare water tank for cleaning

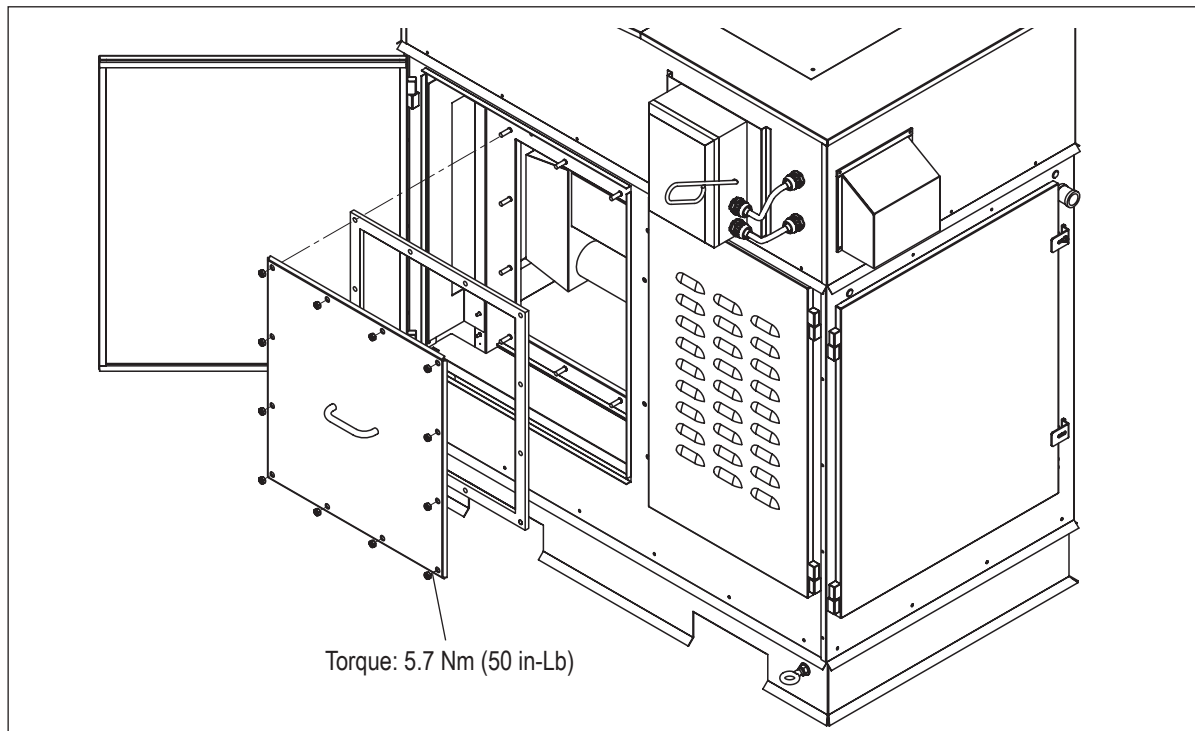

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the left front panel. Then, unscrew the nuts of the side tank cover and remove the cover.
3. **On GS...OC 120 ... 240 only:** unlock and remove the left top panel. Then, unscrew the nuts of the top tank cover and remove the cover.

The re-assembly of the water tank takes place in the reverse sequence. Make sure that the seals of the tank covers are not damaged (replace if necessary).

Important! Tighten the nuts of the tank cover(s) with a torque wrench (torque: 5.7 Nm). Do not over-tighten the nuts.

Cleaning the water tank




Caution – Danger of combustion! The water and all lime deposits in the tank can be extremely hot and may lead to burning on contact. Therefore, allow the humidifier to cool before commencing cleaning work.

The combustion chamber walls are usually self-cleaning. Due to the expansion and contraction during the humidification process, lime deposits peel from the walls and sink to the floor of the tank. An accumulation of lime on the floor of the tank up to a maximum height of 50 mm is permissible and does not affect the operation of the humidifier.

- Remove the lime deposits in the tank and combustion chamber walls with a plastic scraper. Do not use metal spatulas or scrapers, because these are likely to scratch the internal walls of the tank.
- Remove lime deposits from the floor of the tank with a spatula and/or with an industrial water suction apparatus. Rinse out residual accumulations of lime with fresh tap water via the open auxiliary water drain connection (Using a bucket). Never rinse away lime accumulations directly into the connected water drain outlet, because there is a danger of the drain pump, the drain pipe and the siphon becoming blocked.
- Remove the hose connections to the tank and clean them internally.

Removal and installation of the combustion air blower

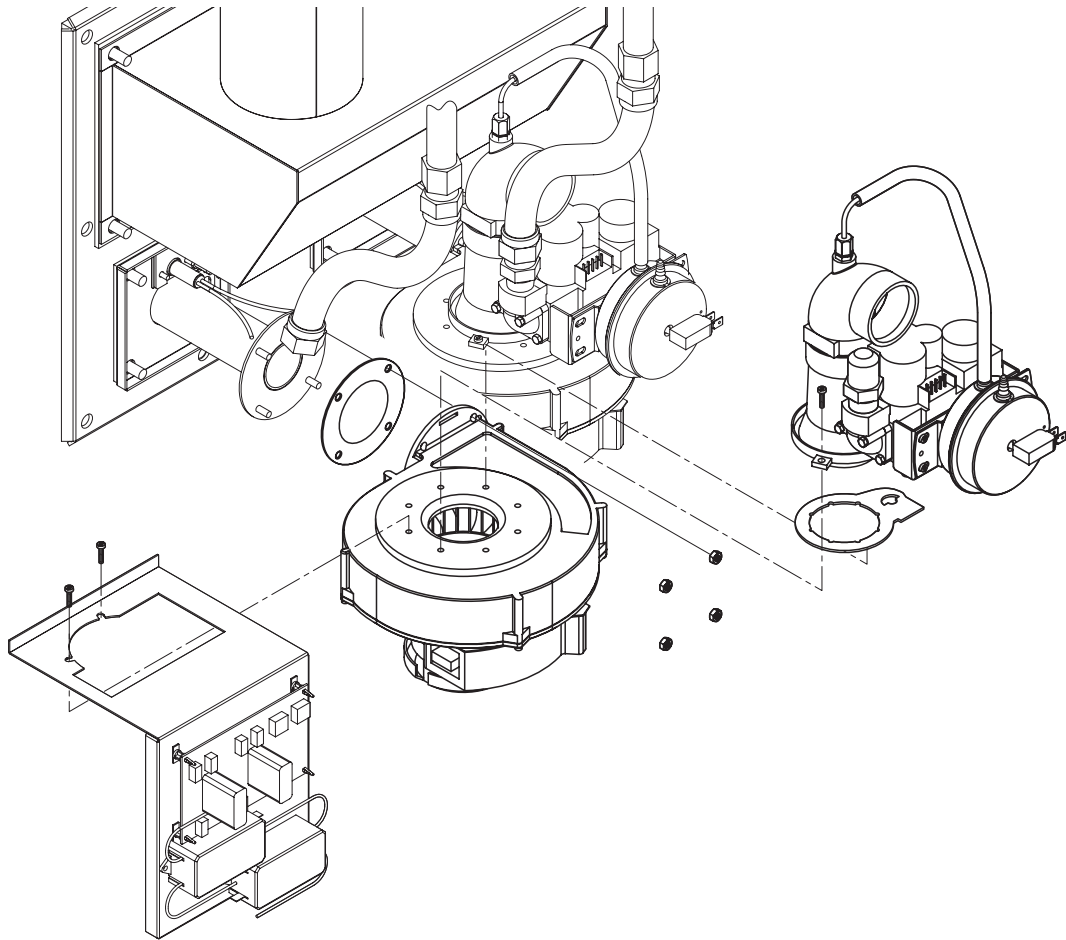


1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel(s).
3. Disconnect cables to combustion air blower, gas pressure regulating valve and pressure switch (note assignment of the connections).
4. Undo the coupling of the corresponding flexible gas pipe and disconnect the gas pipe.
5. Undo the two screws of the venturi manifold and lift up the manifold together with the gas pressure regulating valve.
6. Undo the two screws of the electronic board (if present) and remove electronic board.
7. Undo the nuts on the outlet side of the blower and remove the blower unit.

Reinstallation is achieved by following the reverse sequence. Replace defective seals with new ones. Make sure that all seals are inserted correctly and all cables are connected correctly.



Caution – Danger of explosion! Following maintenance work on the gas system, a leakage test must always be undertaken in accordance with chapter 5.5.2.

Removal and installation of the burner

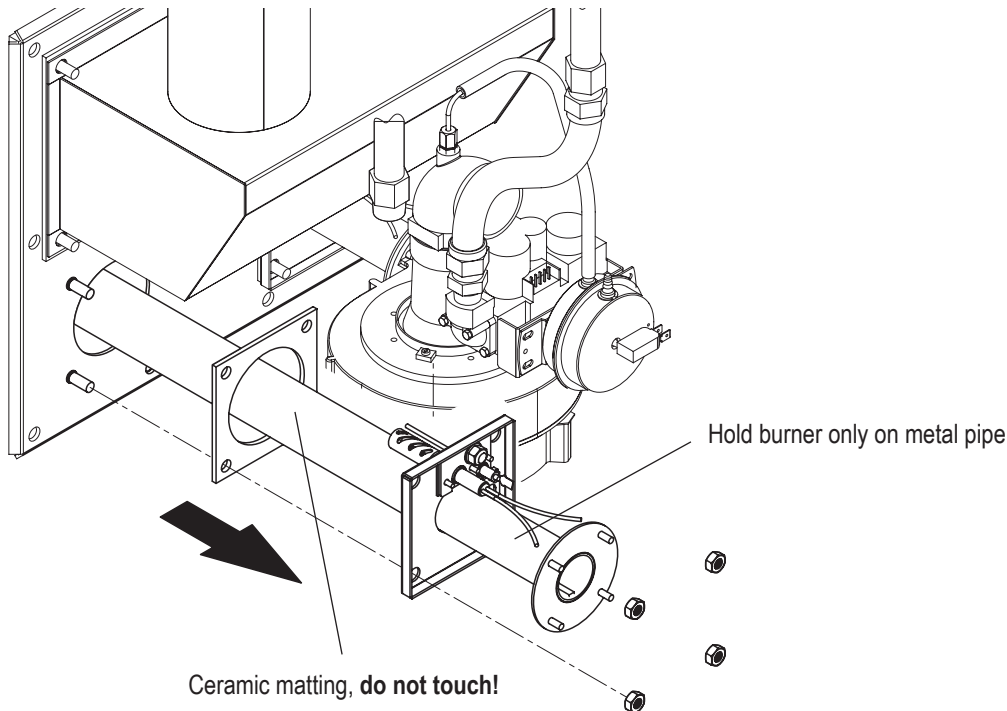

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel(s).
3. Remove the combustion air blower (see the section “Removal and installation of the combustion air blower” above).
4. Disconnect the cables to the igniter and to the flame monitoring unit and remove the components (see the section on “Removal and installation of the igniter and the flame sensor”).
5. Unscrew the four nuts in the burner flange and **carefully** remove the burner unit . Make sure that the burner is not damaged.

Note: Grease, dirt and dust at the ceramic matting can affect the performance of the burner.

Re-installation is achieved by following the reverse sequence. Renew the flange seal and replace igniter and flame sensor if necessary. Tight the nuts of the burner flange with a torque wrench (torque: 10 Nm). Make sure all cables are connected correctly.



Caution – Danger of explosion! Following maintenance work on the gas system, a leakage test must always be undertaken in accordance with chapter 5.5.2.

Cleaning the burner elements

Carefully blow out the burner element mats (ceramic fibre material) from outside with compressed air. Severely soiled burner elements should be replaced.


Cleaning the blower/burner chamber of the unit

Carefully clean the blower and the burner chamber by freeing any kind of soiling and accumulations.



Caution! Wet cleaning of the blower and the burner chamber is not permitted.

Removal and installation of the gas pressure regulating valve

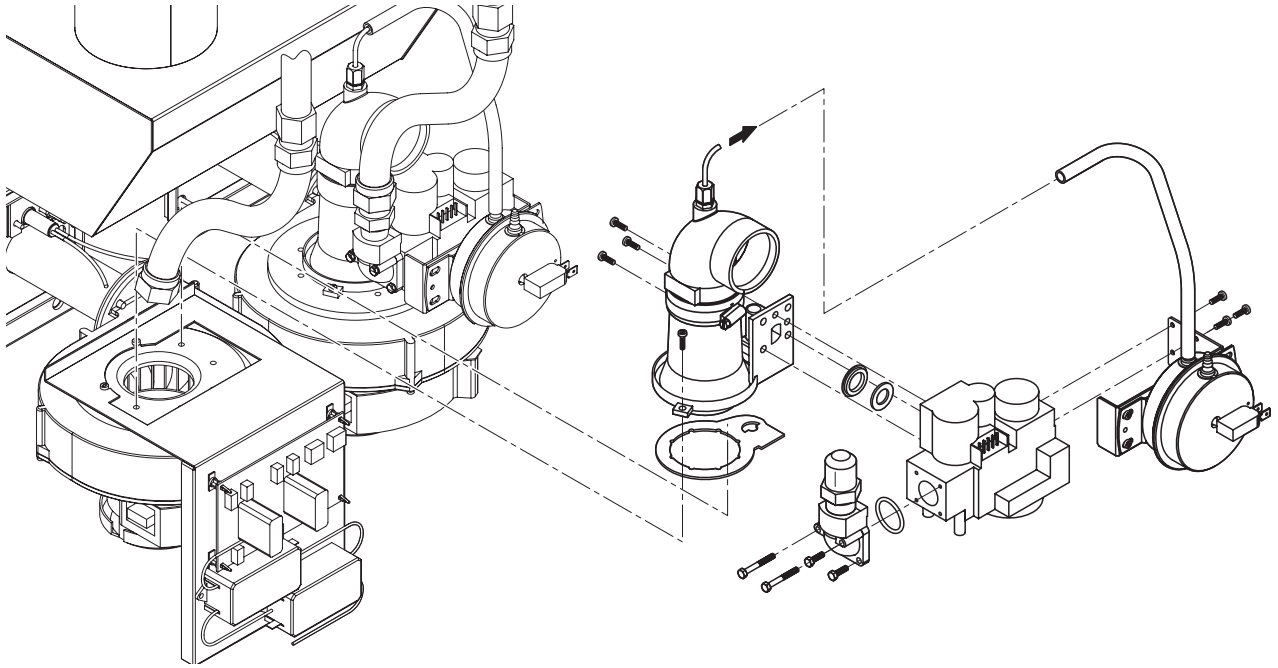


1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel(s).
3. Disconnect electrical wiring to the gas pressure regulating valve and the pressure switch (note the connection layout).
4. Undo the coupling of the corresponding flexible gas pipe and disconnect the gas pipe.
5. Undo the two screws of the venturi manifold and lift up the manifold together with the gas pressure regulating valve.
6. Undo the four screws and remove the gas pipe connection of the gas pressure regulating valve.
7. Pull off the hose connected to the pressure switch (note the connection layout). Then, undo the three screws of the pressure switch support and remove pressure switch assembly from the gas regulating valve.
8. Undo the three screws fixing the gas pressure regulating valve to the venturi manifold then, remove the gas pressure regulating valve from the venturi manifold.

Reinstallation is achieved by following the reverse sequence. Replace defective seals with new ones. Make sure that all seals are inserted correctly and all cables are connected correctly.



Caution – Danger of explosion! Following maintenance work on the gas system, a leakage test must always be undertaken in accordance with chapter 5.5.2.

Removal and installation of the igniter and the flame sensor

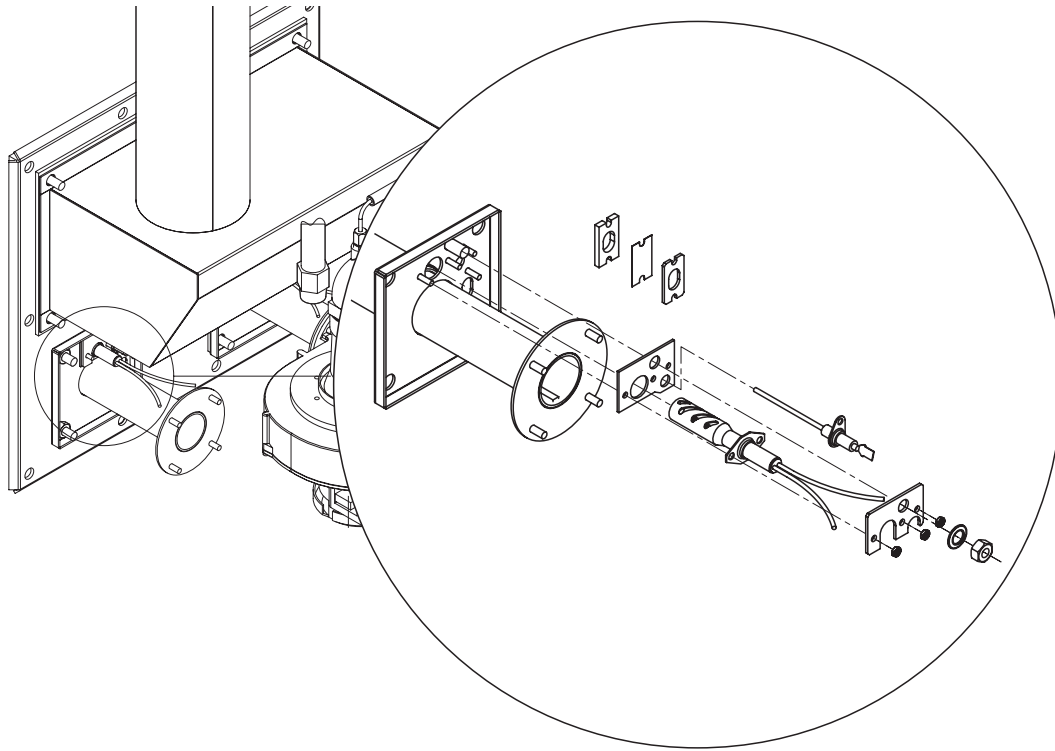

Caution! When replacing the igniter and the flame sensor, use only the set of spares “burner spare parts subject to wear” available from your Condair supplier, since otherwise the humidifier could be damaged.


1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel(s).
3. Disconnect the wiring connection to the igniter and to the flame sensor.
4. Unscrew the fixing nuts for the igniter and the flame sensor. Now carefully remove the igniter and flame sensor.



Caution! The silicon carbide igniter is breakable. Therefore handle it with great care to avoid damage.

Reinstallation is achieved by following the reverse sequence. Inspect gaskets and replace if defective. Make sure that all gaskets are inserted correctly and all cables are connected correctly.


Replacement of the ignition module

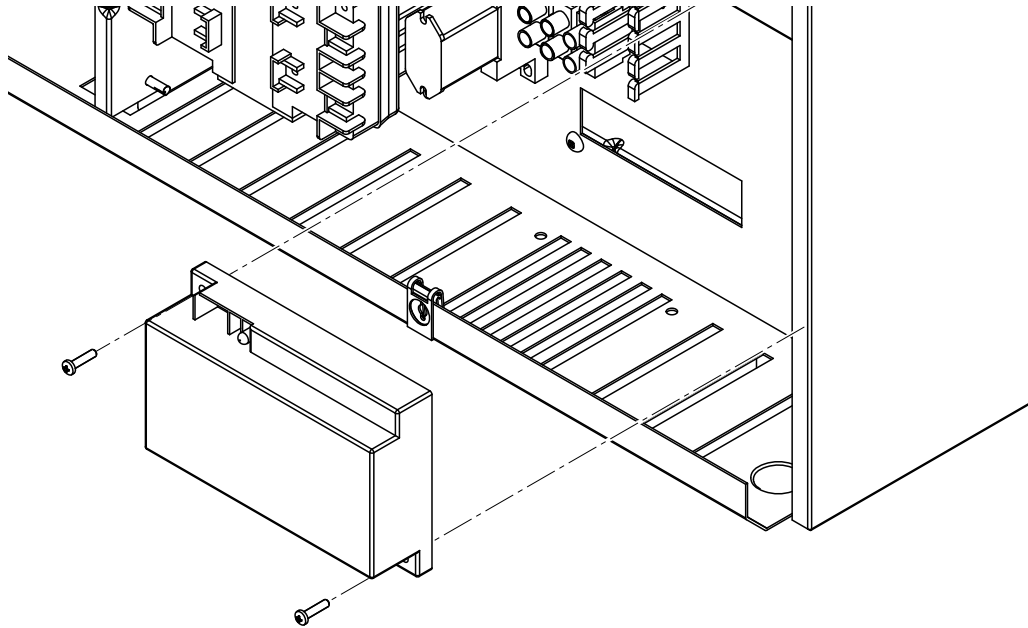

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right front panel
3. Note the cable assignment, then remove all connection cables to the ignition module.
4. Unscrew the two fixing screws securing the ignition module and then remove ignition module.

Re-installation follows in the reverse sequence. Make sure the connecting cables are connected correctly.


Replacement of the air pressure switch

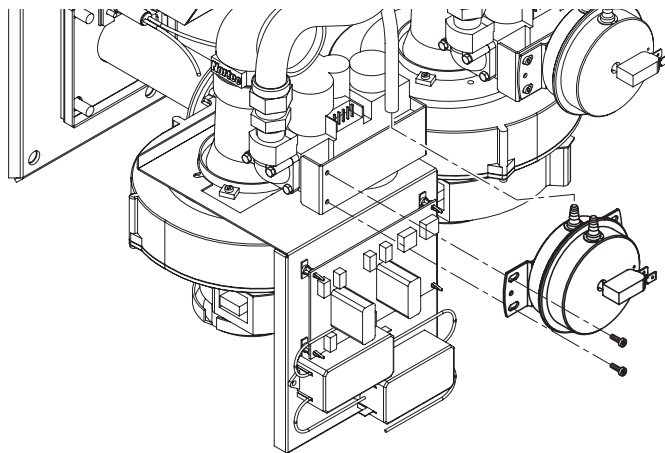

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel(s).
3. Pull off the hose connected to the pressure switch (note the connection layout).
4. Remove the connection cable to the pressure switch (note assignment before removal).
5. Unscrew the two fixing screws and remove the air pressure switch.

Re-installation follows in the reverse sequence. Make sure the cables and the hose are connected correctly.


Replacing the transformer

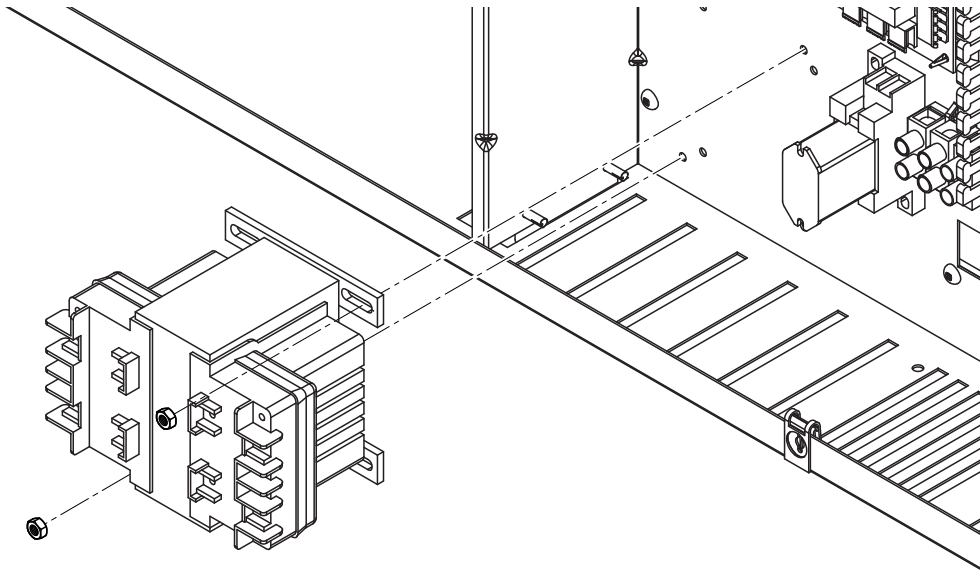

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right front panel
3. Remove the connection cables to the transformer, if necessary labeling the cables before removal.
4. Unscrew the two nuts and remove the transformer.

Re-installation is carried out in the reverse sequence. Make sure the cables are connected correctly.


Replacing the drain pump

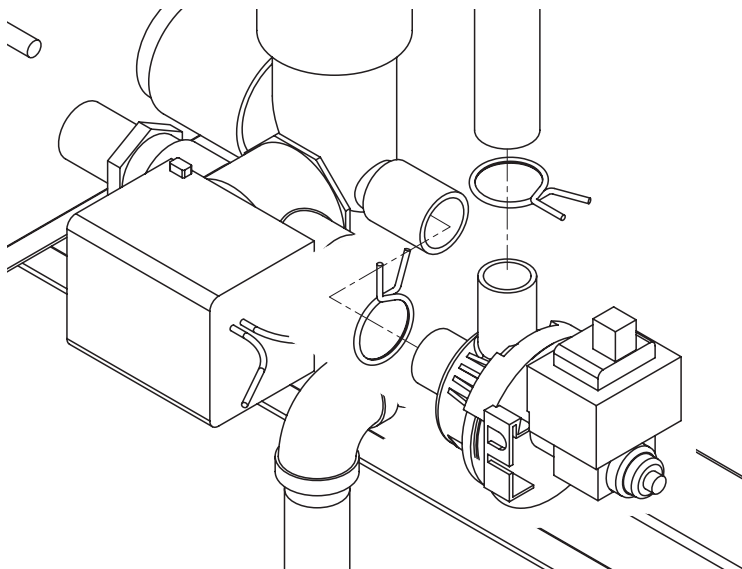

1. Take the humidifier out of operation, as described in chapter 7.4.
Important! If drain pump is defective, drain tank manually via the auxiliary drain.
2. Undo the brackets and open the right side panel.
3. Remove the connection cables to the drain pump (note assignment before removal).
4. Remove hose clamps on the drain pump connections and pull off the hoses, then remove the drain pump.

Re-installation is carried out in the reverse sequence. Make sure the hoses are correctly secured with the hose clamps and the cables are connected correctly.


Replacing the auxiliary drain valve

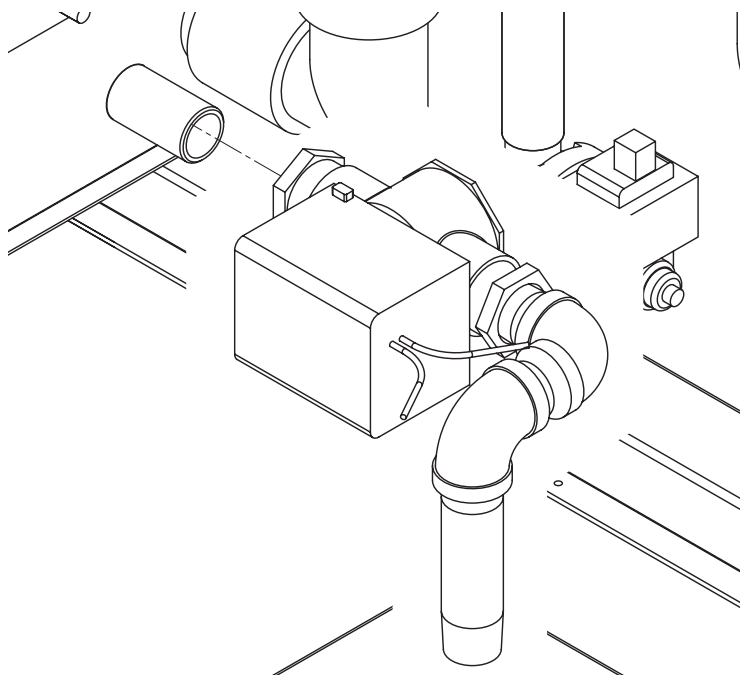

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel.
3. Remove the connection cables to the auxiliary drain valve (note assignment before removal).
4. Disconnect the auxiliary drain valve from the tank connection and remove.

Re-installation is carried out in the reverse sequence. Make sure the cables are connected correctly.


Replacing the fill valve

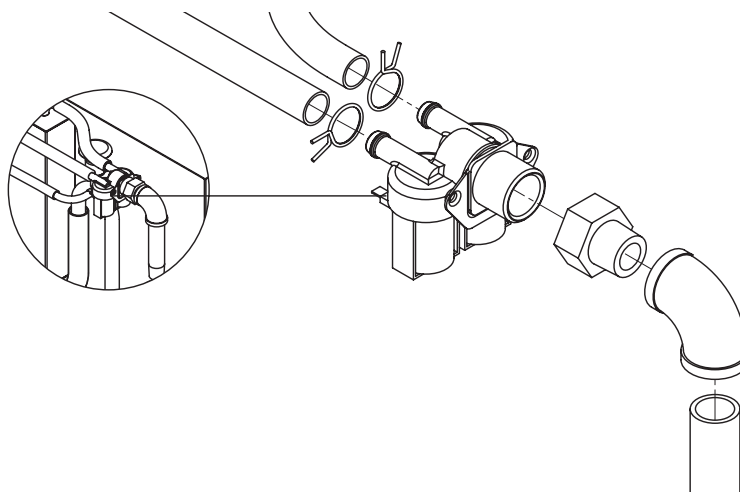

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel.
3. Remove the connection cables to the fill valve (note assignment before removal).
4. Remove hose clamps on the fill valve connections and pull off the hoses.
5. Undo the two screws fixing the fill valve to the housing, then remove the fill valve.

Re-installation is carried out in the reverse sequence. Make sure the hoses are correctly secured with the hose clamps and the cables are connected correctly.


Replacing the water level unit

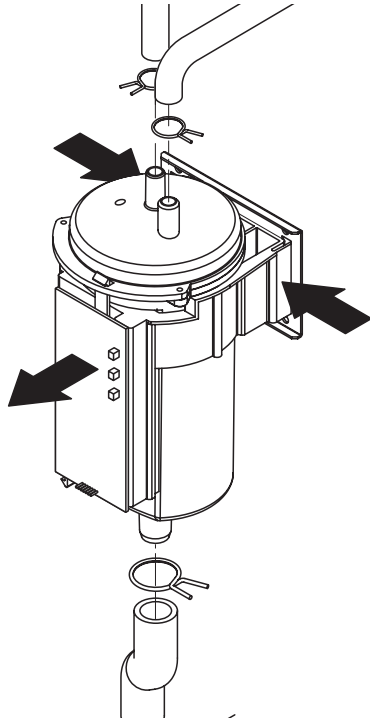

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the left front panel
3. Remove the connection cable to the level unit.
4. Remove hose clamps on the level unit connections and pull off the hoses.
- 5 Squeeze both sides of the mounting bracket to release it from the slots in the support bracket behind the water level unit, then remove the level unit.

Re-installation is carried out in the reverse sequence. Make sure the hose are correctly secured with the hose clamps and the cable is connected correctly.

Replacing the filling chamber

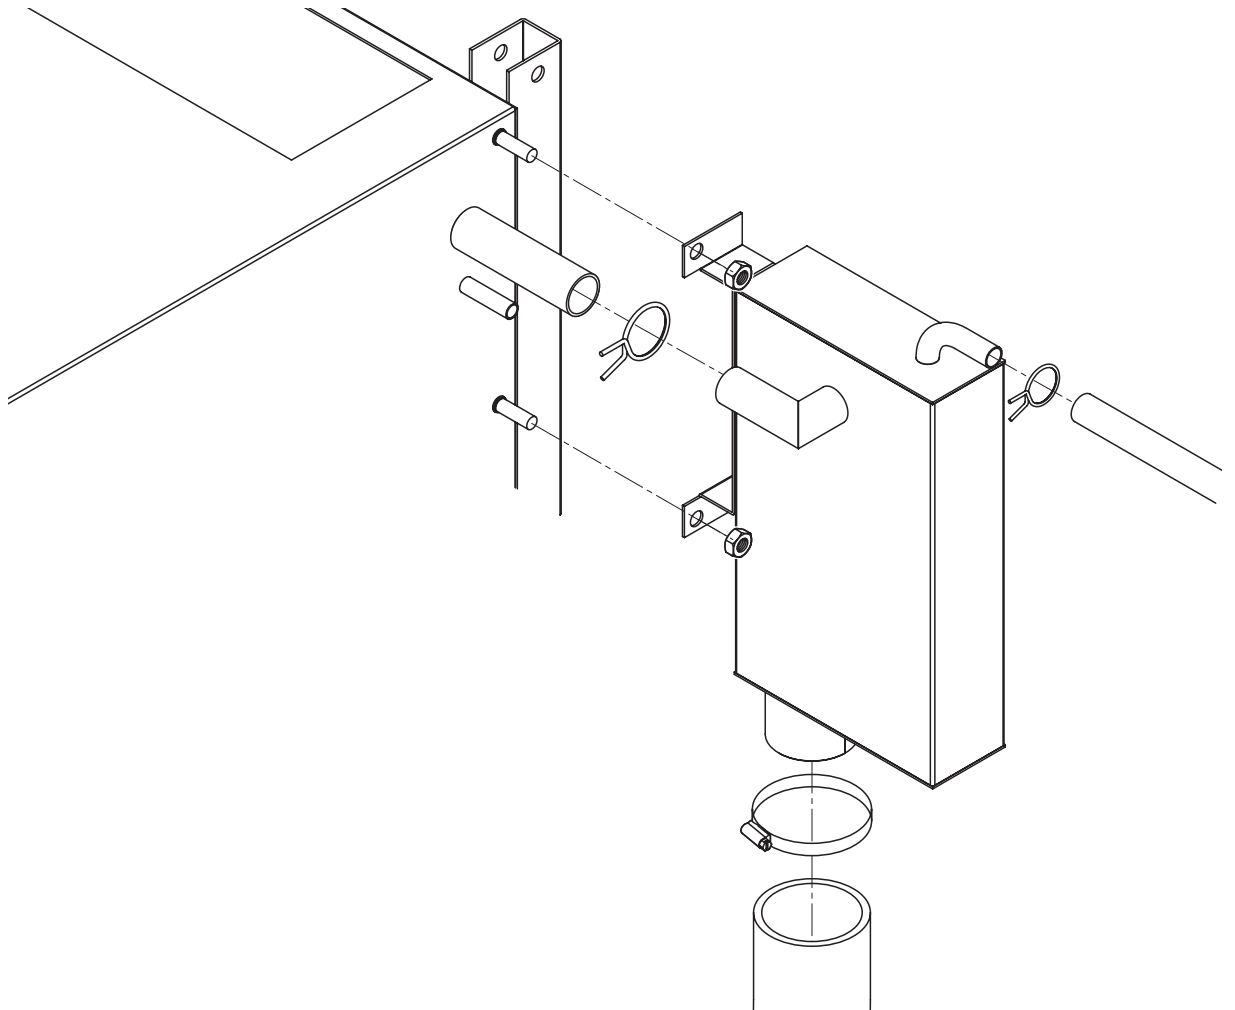

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Undo the brackets and open the right side panel.
3. Remove hose clamps on the filling chamber connections and pull off the hoses.
4. Undo the two nuts securing the filling chamber to the face of the tank, then remove the filling chamber.

Re-installation is carried out in the reverse sequence. Make sure the hose are correctly secured with the hose clamps.


Removal of the heat exchanger (see following illustration)

1. Take the humidifier out of operation, as described in chapter 7.4.
2. Disconnect the gas supply pipe from the connection on the humidifier and close off the pipe.
3. Undo the brackets and open the right side panel(s).
4. Dismount flue gas pipe extension at the connection of the flue gas manifold.
5. Free all cable connections to the components (combustion blower, ignition module, air pressure switch, etc.) of the respective heat exchanger.
Important! Note the connector assignment.
6. Undo the coupling of the respective flexible gas pipe and remove the flexible gas pipe.
7. Dismount the burner with the air blower and the gas pressure regulating valve of the respective heat exchanger.
8. Unscrew the nuts and remove the flue gas manifold from the heat exchanger.
9. Unscrew the nuts on the heat exchanger and pull out the heat exchanger from the tank.

Re-installation is carried out in the reverse sequence. Replace all seals with new ones. Make sure all cables are connected correctly.



Caution – Danger of explosion! Following maintenance work on the gas system, a leakage test must always be undertaken in accordance with chapter 5.5.2.

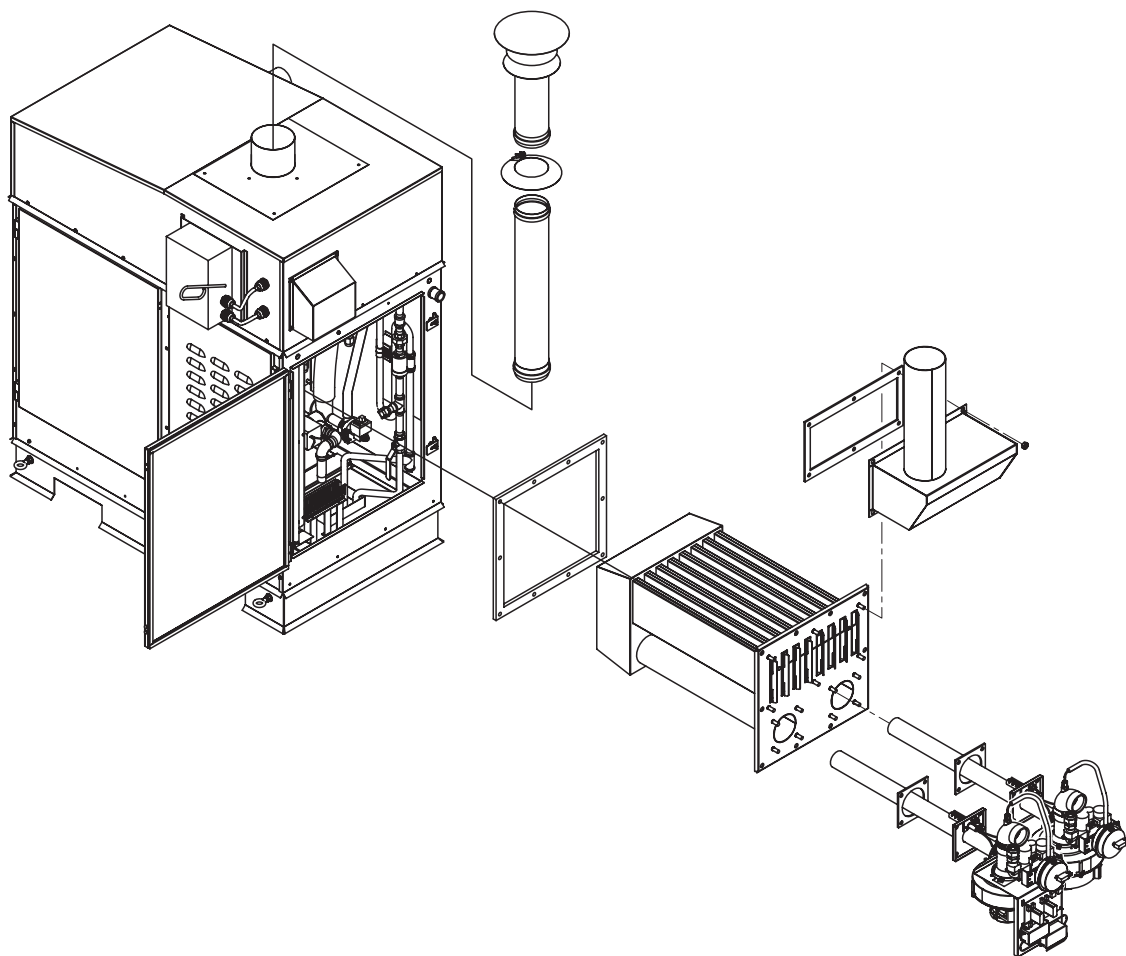

8.3 Notes on cleaning agents

The information and specifications relating to the cleaning agents to be used must be strictly observed. In particular: Information on personal protection, environmental protection and all restrictions in the use of cleaning agents.



The use of disinfectants is only permitted if they deposit no poisonous residues. In all cases, the components that have been cleaned in this way are to be rinsed with water.

Caution! Do not use solvents for cleaning purposes, nor aromatized or halogenized hydrocarbons or other aggressive substances.

Follow local environmental protection regulations without reservation.

8.4 Resetting the maintenance reminder

After completing maintenance work, the maintenance reminder message must be reset via the reset function in menu mode of the control (see chapter 5.6 in the separate operating instructions for Condair GS control).

9 Troubleshooting

9.1 Important notes on troubleshooting

Important! Most operational malfunctions are not caused by faulty equipment but rather by improper installation or disregarding of planning guidelines. Therefore, a complete fault diagnosis always involves a thorough examination of the entire system. Often, the steam hose connection has not been properly executed, or the fault lies with the humidity control system.



Service and repair work must only be carried out by qualified personnel specially trained for such activities. In the case of any uncertainty please contact your local Condair representative/dealer.

Before commencing service and repair work, the Condair GS...OC must be taken out of operation, as described in chapter 7.4, and prevented from being inadvertently switched on.

9.2 Error indication

Malfunctions during operation are indicated by a corresponding warning message (operation still possible, red LED flashes) or a fault message (operation not possible any longer, red LED lights) in the display of the operating and control unit. Detailed information thereto can be found in the separate operating instructions for Condair GS control.

9.3 Resetting the error indication

To reset the error indication:

Disconnect the Condair GS from the mains for approx. 5 seconds, then reconnect again.

Note: If the fault has not been eliminated, the error indication reappears after a short while.


9.4 Replacing the backup battery on the control board of the Condair GS...OC

1. Set the Condair GS...OC out of operation as described in chapter 7.4.
2. Undo the brackets and open the right front panel.

CAUTION!

The **electronic components** inside the humidifier are **very sensitive to electrostatic discharge**. Before carrying out the next step, appropriate **measures must be taken to protect the electronic components against damage caused by electrostatic discharge (ESD protection)**.

3. Undo the 2 screws "A" of the display and control unit, then carefully remove the display and control unit to the front.
4. Undo the 7 fastening screws "B" of the control board, then carefully pull-off the control board from the display and control unit assembly.

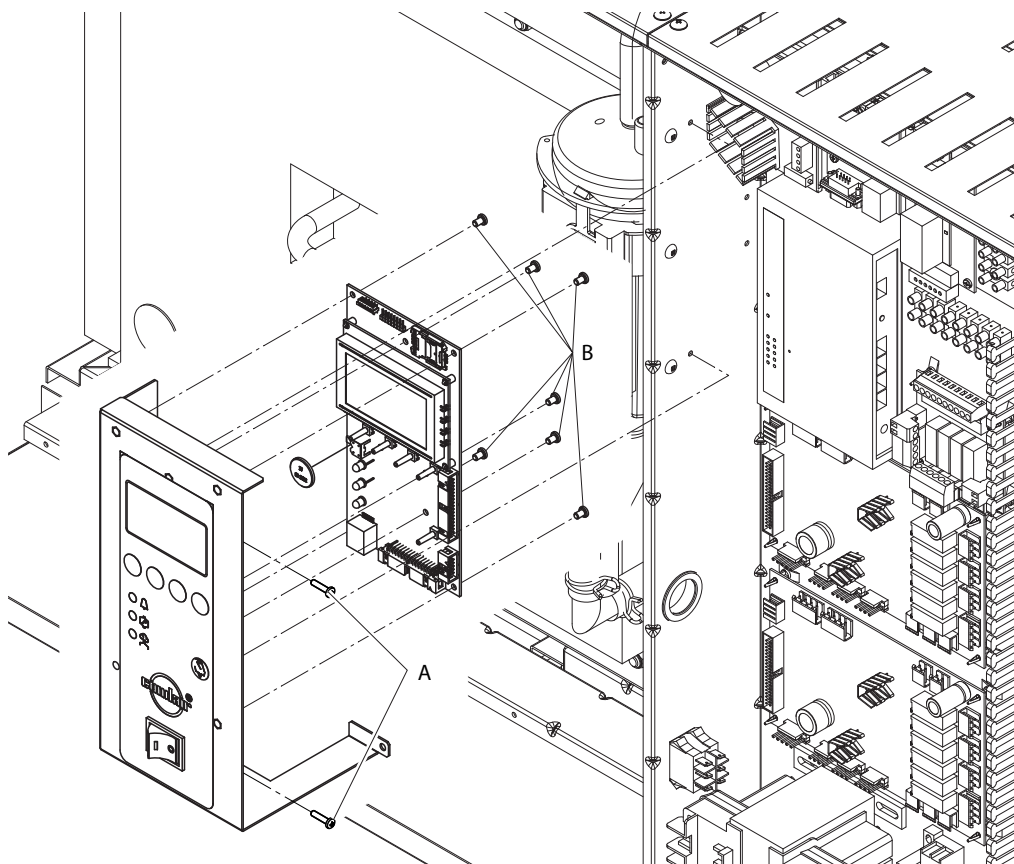

5. Replace the backup battery (CR2032, Lithium 3V).
6. Reassemble the unit in reverse order.
7. If necessary set date and time (see operating instructions of the control).



WARNING!

Environmental hazard!



The old battery must be returned to an authorised collecting point for correct disposal/recycling in accordance with local regulations. In no case the old battery must be disposed of in the domestic waste or into the environment.

10 Taking out of service/Disposal

10.1 Taking out of service

If the Condair GS...OC must be replaced or if the humidification system is not needed any more, proceed as follows:

1. Take the unit out of operation as described in chapter 7.4.
2. Have the unit (and all other system components, if necessary) unmounted by a qualified service technician.

10.2 Disposal/Recycling



Components not used any more must not be disposed of in the domestic waste. Please dispose of the unit or the individual components in accordance with local regulations at the authorised collecting point.

If you have any questions, please contact the responsible authority or your local Condair representative.

Thank you for your contribution to environmental protection.

11 Specifications

11.1 Technical Data

Condair GS...OC	Type	40	80	120	160	200	240
Steam output	kg/h	10...40	10...80	10...120	10...160	10...200	10...240
Energy consumption	kW	36.5	73.0	109.5	146.0	182.5	219.0
Gasous fuel	Natural gas (G20, G25, G25.1, G27, GZ350) or Propane gas (G31)						
Electric connections							
power supply	230V/50...60Hz/1Phase						
power consumption	Watt	460	690	920	1150	1380	1610
power supply fuse	Ampere	10, slow acting					
Mechanical Connections							
Fill water inlet	Inch	BSP 1/2"					
Drain	Inch	BSP 3/4"					
Auxiliary drain	Inch	BSP 1/2"					
Gas line	Inch	BSP 1/2"	BSP 3/4"	BSP 1"	BSP 1"	BSP 1 1/4"	BSP 1 1/4"
Steam hose connection	Inches	1 3/4" (45mm)	3" (76 mm)	3" (76 mm)	4" (101 mm)	4" (101 mm)	4" (101 mm)
Flue pipe connection	Inches	3" (76 mm)	4" (101 mm)	5" (127 mm)	5" (127 mm)	6" (152 mm)	6" (152 mm)
Humidity control							
Possible control signals	0...5VDC / 1...5VDC / 0...10VDC / 0...20mA / 4...20mA						
Dimensions							
Height	cm	138 (with mounted flue gas venting 199.7)					
Width	cm	126.2					
Depth	cm	54.5	70.8	110.4	110.4	150	150
Shipping weight	kg	243	297	399	411	526	538
Operating weight							
filled	kg	280	362	563	563	778	779
empty	kg	209	251	342	353	458	470
Operating conditions							
Admissible water pressure	bar	3...8					
Water quality	untreated drinking water or fully demineralized water						
Admissible gas supply pressure	mbar	G20: 17...25 / G25: 20...30 / G25.1: 20...30 G27: 17.5...23 / GZ350: 10.5...16 / G31: 25...57.5					
Admissible ambient temperature	°C/°F	-25°C tot 35°C – unit powered on 0°C tot 25°C – unit powered off					
Admissible ambient humidity	%rh	10...95% non condensing					
Overpressure at the flue outlet							
at full load	Pa	80					
at minimum load	Pa	5					
Type of protection	–						
Admissible duct air pressure	Pa	–800 ... +1700					
Further informations							
Conformity	CE						
Patents	Condair® international trademark/international patents						

11.2 Flue gas specifications

		Natural gas G20		Natural gas G25	
		full load	part load	full load	part load
Condair GS 40 OC					
energy consumption	kW	36.5	10.5	36.5	10.5
gas consumption	kg/h	2.4	0.68	3.04	0.87
	m³/h	3.478	0.8695	4.0443	1.0111
exhaust temperature	°C	180	120	180	120
exhaust mass flow	kg/s	0.015	0.0034	0.017	0.0058
CO ₂ -content	%	8.9	8	8.7	8
flue gas pressure	Pa	80	5	80	5
exhaust diameter	mm	76		76	
Condair GS 80 OC					
energy consumption	kW	73	10.5	73	10.5
gas consumption	kg/h	4.72	0.68	6.08	0.87
	m³/h	6.956	0.8695	8.0886	1.0111
exhaust temperature	°C	180	72	180	72
exhaust mass flow	kg/s	0.03	0.0067	0.034	0.0113
CO ₂ -content	%	8.9	4.4	8.7	4.3
flue gas pressure	Pa	80	5	80	5
exhaust diameter	mm	101		101	
Condair GS 120 OC					
energy consumption	kW	109.5	10.5	109.5	10.5
gas consumption	kg/h	7.08	0.68	9.12	0.87
	m³/h	10.434	0.8695	12.133	1.0111
exhaust temperature	°C	180	57	180	57
exhaust mass flow	kg/s	0.045	0.0099	0.051	0.0169
CO ₂ -content	%	8.9	2.9	8.7	2.9
flue gas pressure	Pa	80	5	80	5
exhaust diameter	mm	127		127	
Condair GS 160 OC					
energy consumption	kW	146	10.5	146	10.5
gas consumption	kg/h	9.44	0.68	12.16	0.87
	m³/h	13.9121	0.8695	16.1773	1.0111
exhaust temperature	°C	180	49	180	49
exhaust mass flow	kg/s	0.06	0.0131	0.068	0.0224
CO ₂ -content	%	8.9	2.2	8.7	2.2
flue gas pressure	Pa	80	5	80	5
exhaust diameter	mm	127		127	
Condair GS 200 OC					
energy consumption	kW	182.5	10.5	182.5	10.5
gas consumption	kg/h	11.8	0.68	15.2	0.87
	m³/h	17.3902	0.8695	20.2216	1.0111
exhaust temperature	°C	180	44	180	44
exhaust mass flow	kg/s	0.075	0.0164	0.085	0.0279
CO ₂ -content	%	8.9	1.8	8.7	1.7
flue gas pressure	Pa	80	5	80	5
exhaust diameter	mm	152		152	
Condair GS 240 OC					
energy consumption	kW	219	10.5	219	10.5
gas consumption	kg/h	14.16	0.68	18.24	0.87
	m³/h	20.8682	0.8695	24.2659	1.0111
exhaust temperature	°C	180	41	180	41
exhaust mass flow	kg/s	0.09	0.0196	0.102	0.0335
CO ₂ -content	%	8.9	1.5	8.7	1.5
flue gas pressure	Pa	80	5	80	5
exhaust diameter	mm	152		152	

When operating with natural gas G25.1, G27, GZ350 or propane gas (G31), please contact your Condair supplier for the corresponding flue gas specifications

[illegible]

Notes

Notes



CONSULTING, SALES AND SERVICE:



Reg.No. 40002-2

Manufacturer:

Condair Ltd.

Member of the Walter Meier Group

Talstrasse 35-37, 8808 Pfäffikon, Switzerland

Ph. +41 55 416 61 11, Fax +41 55 416 62 62

info@condair.com, www.condair.com